

# Instructions – Parts List



## Lube Equipment Couplers, Adapters, Nozzles, and Z-Swivels

 
306708 rev.G



### **Important Safety Instructions**

Read all warnings and instructions in this manual.  
Save these instructions.

PROVEN QUALITY. LEADING TECHNOLOGY.



# Symbols

## Warning Symbol



This symbol alerts you to the possibility of serious injury or death if you do not follow the instructions.

## Pressure Relief Procedure

1. Turn off the power supply to the pump.
2. Trigger the valve into a waste container to relieve pressure.
3. Open any bleed-type master air valves and fluid drain valves in the system.
4. Leave the drain valve open until you have completed repairs and are ready to pressurize the system.

## WARNING



 
INSTRUCTIONS

### EQUIPMENT MISUSE HAZARD

Equipment misuse can cause the equipment to rupture or malfunction and result in serious injury.

- This equipment is for professional use only.
- Read all instruction manuals, tags, and labels before operating the equipment.
- Use the equipment only for its intended purpose. If you are not sure, call Graco Technical Assistance at 1-800-543-0339.
- Use only genuine Graco parts and accessories.
- Check equipment daily. Repair or replace worn or damaged parts immediately.
- Do not exceed the maximum working pressure of the lowest rated system component. Refer to the part's drawing for the maximum working pressure of this component.
- Use fluids and solvents which are compatible with the equipment wetted parts. Refer to the **Technical Data** section of all equipment manuals. Read the fluid and solvent manufacturer's warnings.
- Do not use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in pressurized aluminum equipment. Such use could result in a chemical reaction, with the possibility of explosion.
- Do not use hoses to pull equipment.
- Route hoses away from traffic areas, sharp edges, moving parts, and hot surfaces. Do not expose Graco hoses to temperatures above 82\_C (180\_F) or below -40\_C (-40\_F).
- Do not lift pressurized equipment.
- Comply with all applicable local, state, and national fire, electrical, and safety regulations.

# ! WARNING

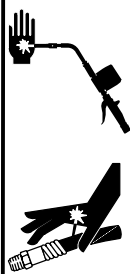

## SKIN INJECTION HAZARD

 
Spray from the dispensing valve, leaks or ruptured components can inject fluid into your body and cause extremely serious injury, including the need for amputation. Fluid splashed in the eyes or on the skin can also cause serious injury.

- Fluid injected into the skin may look like just a cut, but it is a serious injury. **Get immediate surgical treatment.**
- Do not point the dispensing valve at anyone or at any part of the body.
- Do not put your hand or fingers over the end of the dispensing valve.
- Do not stop or deflect leaks with your hand, body, glove or rag.
- Use only extensions and no-drip tips which are designed for use with your dispensing valve.
- Do not use a low pressure flexible nozzle with this equipment.
- Follow the **Pressure Relief Procedure** on page 2 before cleaning, checking or servicing the equipment.
- Never attempt to force lubricant into a fitting.
- Tighten all fluid connections before operating the equipment.
- Check the hoses, tubes, and couplings daily. Replace worn or damaged parts immediately. Do not repair high pressure couplings; you must replace the entire hose.

## Hydraulic Couplers

### Taper Nose Hydraulic Coupler 200325


8000 psi (560 bar) Maximum Working Pressure

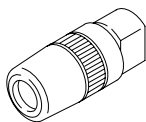

3588

### Standard Button-Head Hydraulic Coupler 200020

 
2500 psi (175 bar) Maximum Working Pressure

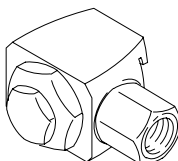

3589

### Giant Button-Head Hydraulic Coupler 200021

 2000 psi (140 bar) Maximum Working Pressure

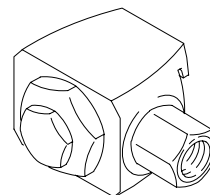

3590

# Adapters

## Hydraulic Adapter Accessory Kit 205592

See the separate listing for each kit component for replacement parts and maximum working pressures.

| Ref. No. | Part No. | Description                                             | Qty. |
|----------|----------|---------------------------------------------------------|------|
| 1        | 201881   | ADAPTER, hydraulic-to-push;<br>See below                | 1    |
| 2        | 203504   | HOSE, nozzle; with lock-sleeve<br>connector; See page 6 | 1    |
| 4        | 205532   | ADAPTER, hydraulic-to-steel needle;<br>See below        | 1    |
| 3        | 205554   | ADAPTER, plug; See page 5                               | 1    |
| 4        | 205568   | ADAPTER, nylon needle; See at right                     | 1    |
| 5        | 205582   | ADAPTER, hydraulic-to-nylon needle;<br>See at right     | 1    |

 
## Low Pressure Adapters

### Hydraulic-to-Steel Needle Adapter 205532

250 psi (18 bar) Maximum Working Pressure

For flush fittings

| Ref. No. | Part No. | Description               | Qty. |
|----------|----------|---------------------------|------|
| 1        | 164799   | NEEDLE, adapter           | 1    |
| 2        | 203497   | CONNECTOR, locking sleeve | 1    |

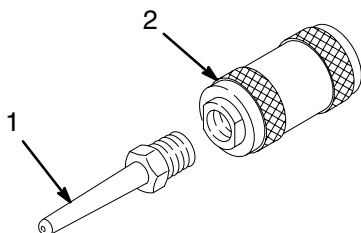


0108

### Hydraulic-to-Push Adapter 201881

 250 psi (18 bar) Maximum Working Pressure

For U-joints and low pressure service

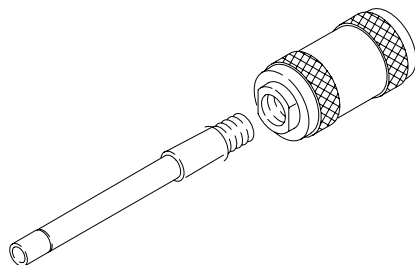

03591


## Hydraulic-to-Nylon Needle Adapter 205582

 250 psi (18 bar) Maximum Working Pressure

For removable plugs

| Ref. No. | Part No. | Description                       | Qty. |
|----------|----------|-----------------------------------|------|
| 1        | 164771*  | NOZZLE, fluid                     | 1    |
| 2        | 164757   | TUBE, adapter; 2 in. (51 mm) long | 1    |
| 3        | 203497   | CONNECTOR, locking sleeve         | 1    |

\*Recommended spare part to keep on hand

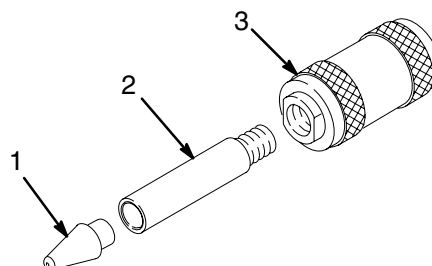

0109


## Nylon Needle Adapter 205568

 250 psi (18 bar) Maximum Working Pressure

For removable plugs

| REF NO. | PART NO. | DESCRIPTION                                            | QTY |
|---------|----------|--------------------------------------------------------|-----|
| 1       | 164771*  | NOZZLE, fluid                                          | 1   |
| 2       | 164772   | TUBE, adapter, needle; 1/8 npt;<br>5 in. (127 mm) long | 1   |

\*Recommended spare part to keep on hand

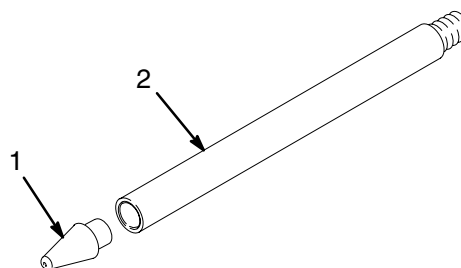


0107

# Adapters
 
## 90° Lube Adapter 223187

250 psi (18 bar) Maximum Working Pressure

| Ref. No. | Part No. | Description               | Qty. |
|----------|----------|---------------------------|------|
| 1        | 203497   | CONNECTOR, locking sleeve | 1    |
| 2        | 185914   | ADAPTER                   | 1    |
| 3        | 151249   | NIPPLE                    | 1    |
| 4        | 156563   | TIP, nozzle               | 1    |

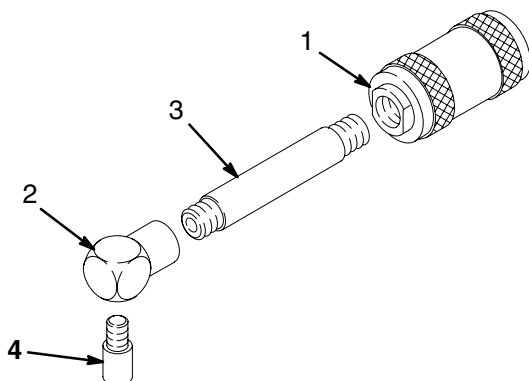


0110

## Medium Pressure Adapter
 
### 90° Plug Adapter 205554

700 psi (49 bar) Maximum Working Pressure  
For removable plugs

| Ref. No. | Part No. | Description                       | Qty. |
|----------|----------|-----------------------------------|------|
| 1        | 205559   | NUT, lock; 1/4-28                 | 1    |
| 2        | 164762   | ADAPTER, 90°                      | 1    |
| 3        | 100846   | FITTING, hydraulic, 1/4-28 thread | 1    |

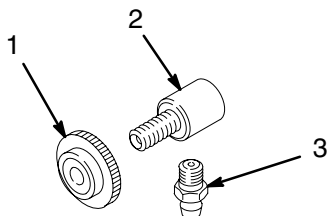


0106

## High Pressure Adapters
 
### Locking Sleeve Connector 203497

6000 psi (420 bar) Maximum Working Pressure  
For quick connection to taper nose coupler

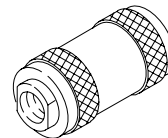


03593

### 360° Grease Swivel & Coupler Kit 203597

 6000 psi (420 bar) Maximum Working Pressure


| Ref. No. | Part No. | Description        | Qty. |
|----------|----------|--------------------|------|
| 1        | 200325   | COUPLER, hydraulic | 1    |
| 2        | 203198   | SWIVEL, 360°       | 1    |

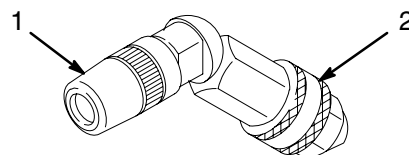

03595

### 360° Grease Swivel 203198

 6000 psi (420 bar) Maximum Working Pressure

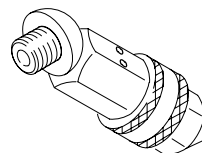

03592


## Straight Swivels

 8000 psi (560 bar) Maximum Working Pressure

**204082** 1/8 npt(m) x 1/8 npt(f)

**204083** 1/4 npt(m) x 1/8 npt(f)

**204084** 1/4 npt(m) x 1/4 npt(f)

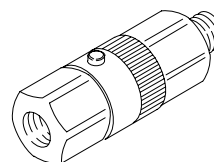


03594

# Grease Nozzles
 
## Hose Nozzle 204204

5000 psi (350 bar) Maximum Working Pressure

| Ref. No. | Part No. | Description                                                        | Qty. |
|----------|----------|--------------------------------------------------------------------|------|
| 1        | 200325   | HYDRAULIC, coupler                                                 | 1    |
| 2        | 151277   | TUBE, adapter; 2.5 in. (64 mm) long                                | 1    |
| 3        | 100451   | COUPLING, pipe; 1/8 npt                                            | 1    |
| 4        | 109145   | HOSE, coupled; 1/8 npt(m); 0.25" (6.4 mm) ID; 12 in. (305 mm) long | 1    |

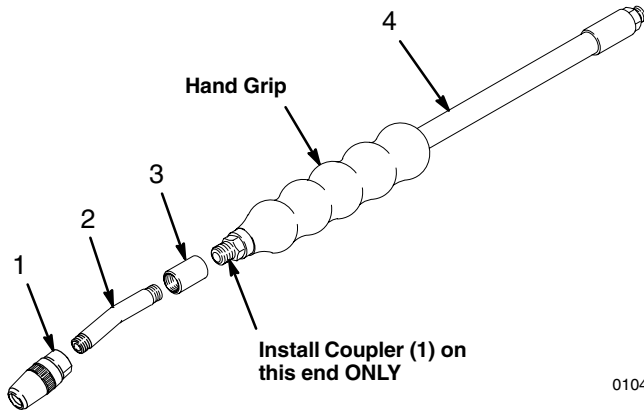

0104

### ⚠ WARNING

 
To reduce the risk of serious injury, including fluid injection:

- Only install a coupler on the hand grip end of the hose, as shown above. Never install a coupler on the other end of the hose.
- Never use the flexible extension without the hand grip in place.

## Hose Nozzle 203504

5000 psi (350 bar) Maximum Working Pressure  
With Lock Sleeve Connector

| Ref. No. | Part No. | Description                                      | Qty. |
|----------|----------|--------------------------------------------------|------|
| 1        | 154289   | HOSE, 3/16 in. ID, 12 in. long, cpld 1/8 npt (m) | 1    |
| 2        | 203497   | CONNECTOR, locking sleeve                        | 1    |
| 3        | 200325   | COUPLER, hydraulic                               | 1    |

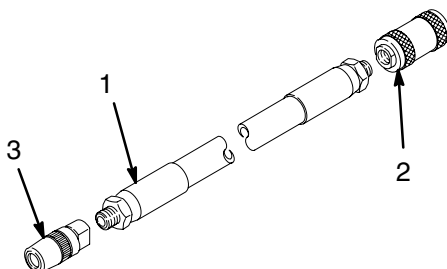


0103

## Standard Grease Nozzle 200389

 8000 psi (560 bar) Maximum Working Pressure

| REF NO. | PART NO. | DESCRIPTION                                                                | QTY |
|---------|----------|----------------------------------------------------------------------------|-----|
| 1       |          | TUBE, adapter; 1/8 npt(m); 6 in. (152 mm) long; <i>Not sold separately</i> | 1   |
| 2       | 200325   | COUPLER, hydraulic                                                         | 1   |

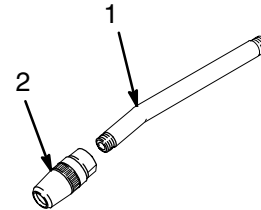

0099


## Swivel Grease Nozzle

 6000 psi (420 bar) Maximum Working Pressure

**204072** 6" (152 mm) long

**204897** 12" (305 mm) long

| Ref. No. | Part No. | Description                                                           | Qty. |
|----------|----------|-----------------------------------------------------------------------|------|
| 1        | 150622   | TUBE, extension; 1/8 npt(m); 6 in. (152 mm) long; <i>204072 only</i>  | 1    |
|          | 155836   | TUBE, extension; 1/8 npt(m); 12 in. (305 mm) long; <i>204897 only</i> | 1    |
| 2        | 200325   | COUPLER, hydraulic; <i>See separate parts list on front cover</i>     | 1    |
| 3        | 203198   | SWIVEL, 360°                                                          | 1    |

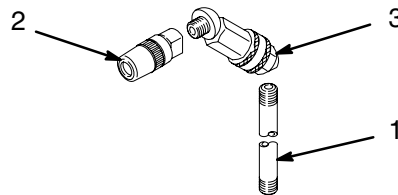

0105

# Z-Swivels

 
## Z-Swivels

6500 psi (450 bar) Maximum Working Pressure

**202577** 1/4–18 npt

**224569** 3/8–18 npt

**202579** 1/8–27 npt (m); 1/4–18 npt (f)



03596

[illegible]

# Graco Standard Warranty

Graco warrants all equipment manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

**THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

Graco makes no warranty, and disclaims all implied warranties of merchantability and fitness for a particular purpose in connection with accessories, equipment, materials or components sold but not manufactured by Graco. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

## **FOR GRACO CANADA CUSTOMERS**

The parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

# Graco Phone Number

**TO PLACE AN ORDER**, contact your Graco distributor, or call this number to identify the distributor closest to you:  
**1-800-533-9655 Toll Free.**

*All written and visual data contained in this document reflects the latest product information available at the time of publication.  
Graco reserves the right to make changes at any time without notice.*

MM 306708

**Graco Headquarters:** Minneapolis  
**International Offices:** Belgium, Korea, China, Japan

**GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441**

**[www.graco.com](http://www.graco.com)**

306708 Rev. G 06/2006