

Instructions – Parts List



HAND ROTARY Transfer Pump

306876 rev.G

Used to transfer petroleum-based and synthetic oils, antifreeze, and non-corrosive chemicals.

Model No. 226290

Delivery rate: 1 gallon (3.7 l) per 18 cycles

Bung nut fits 2 inch (50.8 mm) bung hole.


Includes a 42 inch (1066.8 mm) suction tube.



Important Safety instructions.

Read all warnings and instructions in this manual.

Save these instructions.

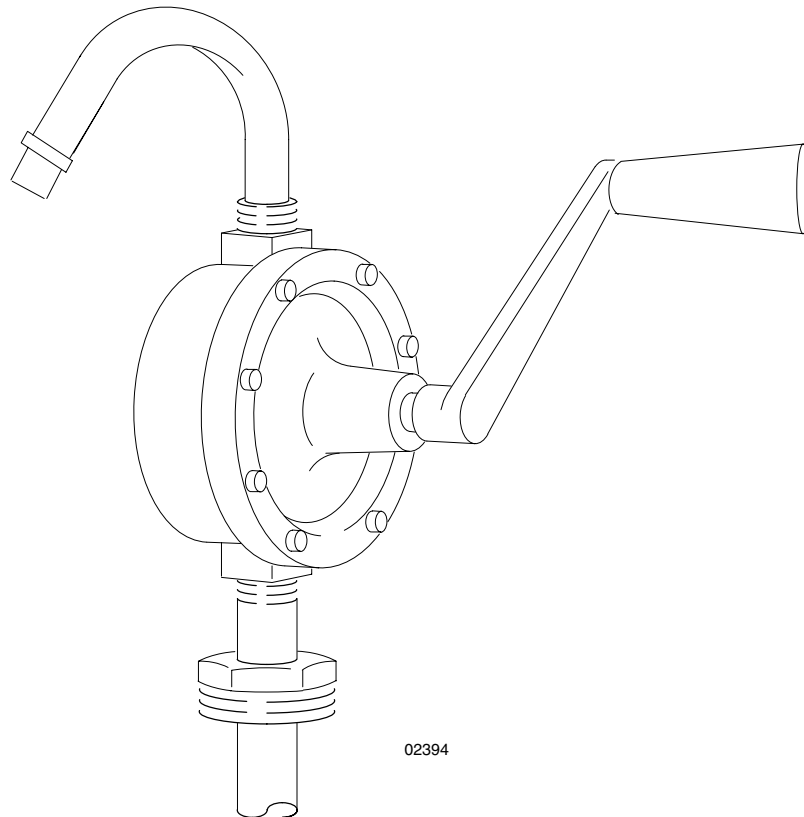

02394

PROVEN QUALITY. LEADING TECHNOLOGY.

Installation

Grounding

WARNING



FIRE AND EXPLOSION HAZARD

When pumping flammable liquids such as gasoline, solvent, alcohol, or cleaning fluids, ground all equipment to avoid building-up static electricity, which may ignite vapors or gases and result in serious injury or property damage.

Do not allow any open flame, such as those from cigarettes or lighters, in the area. Do not plug in or unplug any power supply cords, when there is any chance of sparks igniting fumes still in the area. Keep the pumping area clear of debris, including dust, which could be ignited by a spark.

To ground the pump, connect the pump and fluid containers using bonding clamps or clips and a conductive wire that is a minimum of 12 gauge. A secure metal-to-metal contact must be made. Attach the other end of the wire to a true earth ground.

Installing the Pump

1. Apply pipe joint compound to the threaded ends of each section of the suction pipe (A). Screw the pipe into the pump opening, then tighten it with a pipe wrench.

2. Screw the bung nut (B) tightly into the opening of the tank or drum. Slide the suction pipe (A) through the bung nut opening and allow it to rest against the bottom of the drum. Tighten the bung nut set-screw against the suction pipe.
3. Before pumping, make sure there is an open air vent in the tank or drum. The pump will not operate properly without an open air vent.

NOTE: A foot valve should be used at the bottom of the suction pipe if you are using an underground tank installation.

Priming the Pump

CAUTION


Some liquids, such as gasoline, alcohol, and cleaning fluids may dry out the pumping mechanism. If you are using such a liquid, flush the pump thoroughly with heavy oil when the pump is not in use. This will prevent rust and corrosion. Follow the priming procedure below.

Hold a can of oil or the fluid to be pumped up to the spout and turn the crank backwards a few times to draw fluid into the pump.

Parts

△₁ Apply pipe joint compound to threads

△₂ 2" npt

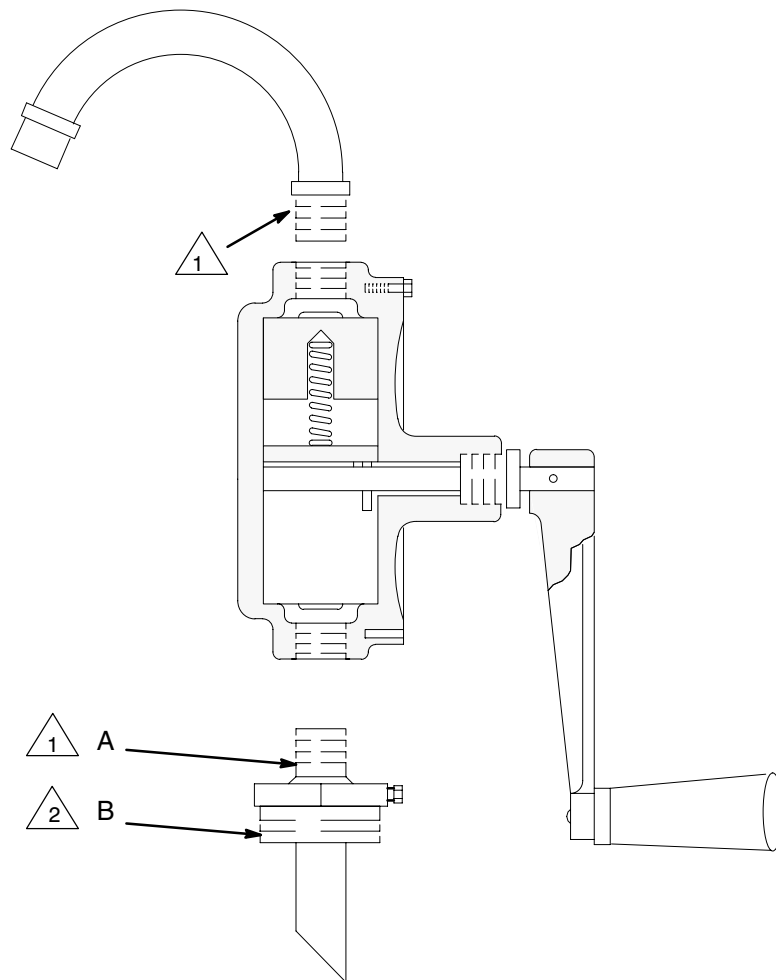

02384

Graco Standard Warranty

Graco warrants all equipment manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

Graco makes no warranty, and disclaims all implied warranties of merchantability and fitness for a particular purpose in connection with accessories, equipment, materials or components sold but not manufactured by Graco. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

TO PLACE AN ORDER, contact your Graco distributor, or call one of the following numbers to identify the distributor closest to you:

1-800-533-9655 Toll Free

612-623-6928

612-378-3590 Fax

*All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.*

MM 306876

Graco Headquarters: Minneapolis
International Offices: Belgium, Korea, China, Japan

www.graco.com

PRINTED IN USA 306876 04/1965, Revised 06/2005