



GRACO

*First choice when
quality counts.™*

Rev. G

Supersedes Rev. F




INSTRUCTIONS

This manual contains important
warnings and information.
READ AND KEEP FOR REFERENCE.

14-Gallon Drum

Waste Oil Receiver

Model 226-377

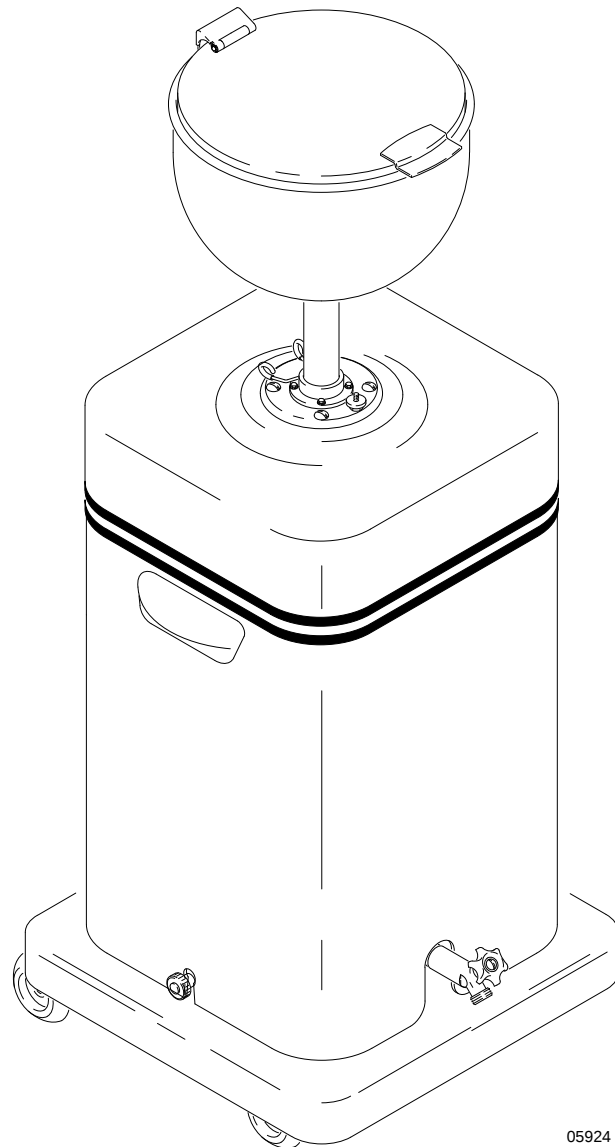

05924

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

<http://www.graco.com>

©COPYRIGHT 1973, GRACO INC.

Graco Inc. is registered to I.S. EN ISO 9001

Installation

Insert the casters (3) in the base (2). Assemble the drain valve (8) to the drum as indicated on the parts drawing on page 3. Install a float ball (28) on the float rod (31). Remove the tape from the head of the rod.

⚠ CAUTION

When installing the shield (11), take care to avoid damaging the float or float rod. Check the up and down movement of the rod.

Position the drum (9) on the base (2) so that the drain valve (8) lines up with the slot in the shield (11). Install the shield and secure it with the thumbnuts (4).

Operation


- Open the funnel cover (34) and position the receiver beneath the crankcase to be drained. Squeeze the ends of the torsion spring (26) together with one hand, grasp the tube with the other hand, lift the tube to the desired height, and release the ends of the spring.
- Use the funnel cover as a baffle plate to prevent splashing oil when draining from the side outlets.
- When draining the differential of a car on a two post lift the funnel cover may be inserted into the space between the bottom of the differential and the lift saddle to act as a tray to conduct lubricant into the funnel. Squeeze the ends of the torsion spring to lower the funnel.
- When the float rod raises above the shield, the receiver is full. To drain it, take the receiver to the drain area and open the drain valve.

Parts List

Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
1		PORTABLE BASE ASSY. <i>Not an orderable part</i>	1	21	100-070	. NUT, hex full; 1/4-28	1
7	203-635	DRAIN OIL TANK Includes items 8-9	1	22	100-104	. PIN, cotter; 1/8" ID x 1 3/4"	1
8	107-247	. VALVE, drain	1	23*	101-021	. RING, retainer	1
9	159-909	. DRUM, waste lube	1	24	101-120	. SCREW, pan hd. mach; 1/4-20 x 1 1/4"	4
10	236-221	LUBRICATOR SHIELD ASSY. Includes items 11-19	1	25	100-078	. SCREW, Type C, hex washer self-tapping; No. 8-32 x .375"	4
11	236-223	. SHIELD, bare	1	26	104-820	. SPRING, torsion	1
12	100-283	.. NUT, tinnerman speed	2	27	151-130	. CAP, float rod	1
13	101-231	.. NUT, tinnerman speed	4	28	156-619	. FLOAT, ball	1
14	101-256	. SCREW, oval hd. binding; No. 10-24 x 1/2"	2	29	157-492	. PIN, hinge	1
17	157-445	. HANDLE	2	30	159-917	. GUIDE, float rod	1
18	166-361	. LABEL, identification (not shown)	1	31	159-929	. ROD, float	1
19	169-336	. TRIM	1	32	166-362	. LABEL, identification (not shown)	1
20	214-671	FUNNEL ASSY. Includes items 21-37	1	33	175-033	. BRACKET, spring retainer	1
				34	202-459	. COVER, funnel	1
				35	214-672	. COLLAR ADAPTER	1
				36	215-234	. FUNNEL	1
				37	111-015	. PLUG, vent	1

* Recommended "tool box" spare part. Keep a spare on hand to reduce down time.

Parts

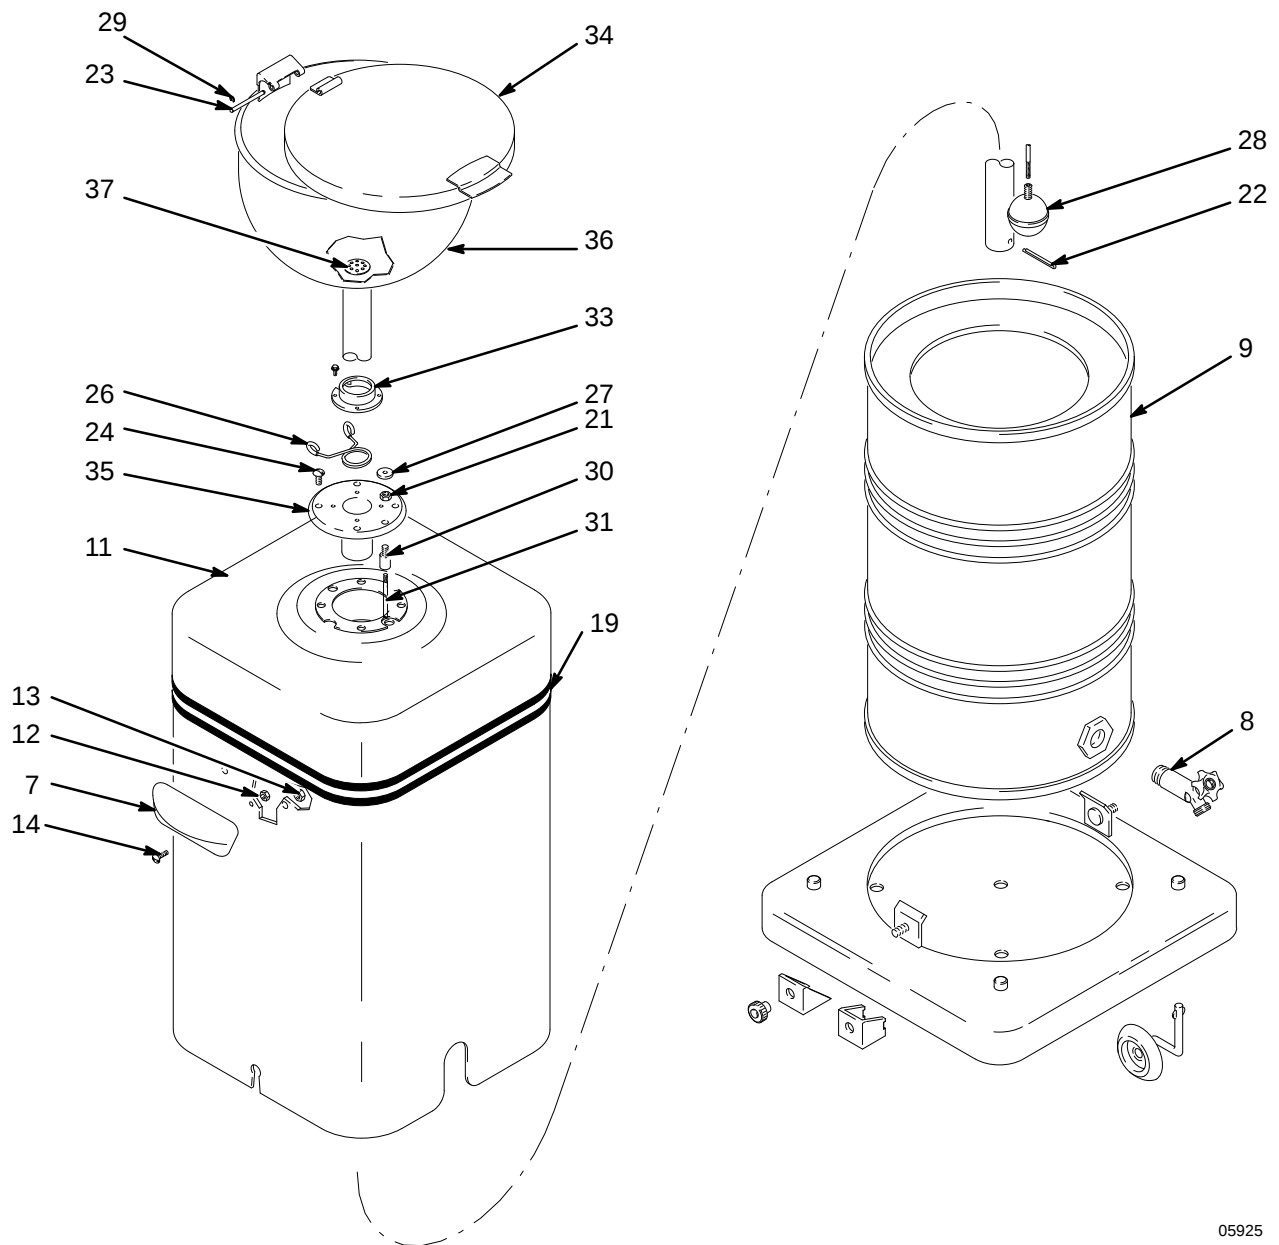

Technical Data

Height	44 in. (1120 mm) Lowered
	68 in. (1730 mm) Raised
Width	19 in. (480 mm)
Weight	75 lb (34 kg)

Graco Warranty and Disclaimers

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale by an authorized Graco distributor to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Phone Number

TO PLACE AN ORDER, contact your Graco distributor, or call this number to identify the distributor closest to you: **1-800-367-4023 Toll Free**

*All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.*

Sales Offices: Minneapolis, Detroit, Los Angeles
Foreign Offices: Belgium, Canada, England, Korea, France, Germany, Hong Kong, Japan

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

<http://www.graco.com>

PRINTED IN U.S.A. 307-100 July 1973, Revised September 1997