

INSTRUCTIONS-PARTS LIST



307-342

4-79

SUPERSEDES 11-78

This manual contains **IMPORTANT WARNINGS** and **INSTRUCTIONS**
READ AND RETAIN FOR REFERENCE

AIR MOTOR SILENCER

FOR BULLDOG AIR MOTORS


MODEL 214-766

IMPORTANT

For Your Personal Operating Safety & Convenience

Record all information from air motor serial plate onto the label of Silencer as illustrated below.

NEVER exceed the pump's maximum recommended operating pressure. BE SURE that all components are rated at least as high as the pressure developed. It is impossible to order parts or request service or warranty information without the information on the air motor serial plate. Record this information in the spaces below and retain this manual in a safe place as an extra precaution.

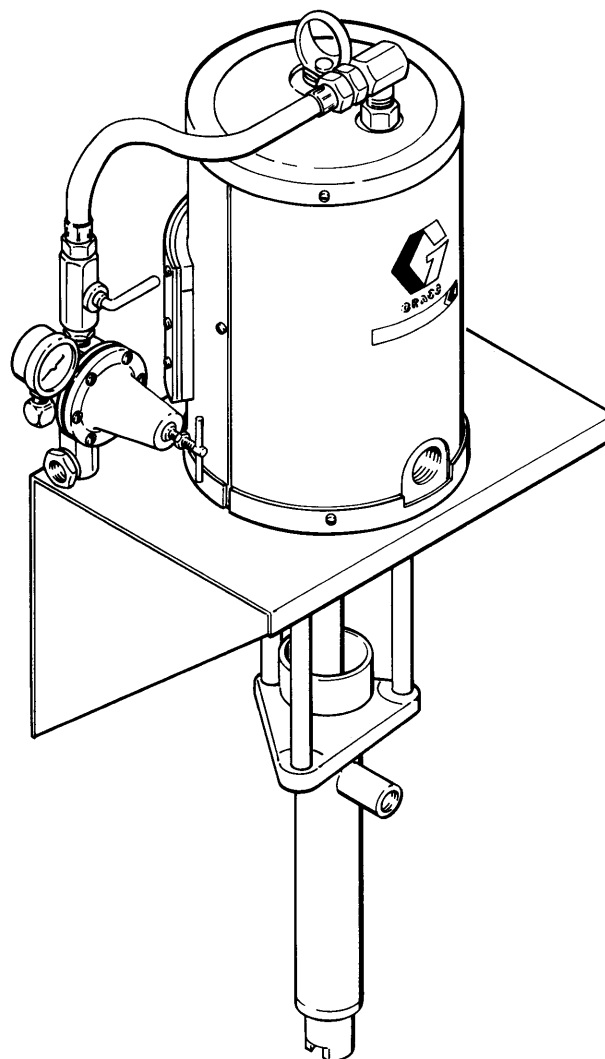

MODEL BULLDOG SERIES
SILENCER

IMPORTANT! MARK DATA FROM PUMP AIR MOTOR SERIAL PLATE IN SPACES PROVIDED BELOW. FOR PERMANENT IDENTIFICATION AND PERFORMANCE DATA, SEE PUMP AIR MOTOR SERIAL PLATE.

Pump Model

Max GPM (l/min)

**Max Air
PSI (bar)**

Ratio

Serial

Series


LABEL NO. 176 467

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440

© COPYRIGHT 1978 GRACO INC.

IMPORTANT NOTE

For Your Personal Operating Safety & Convenience

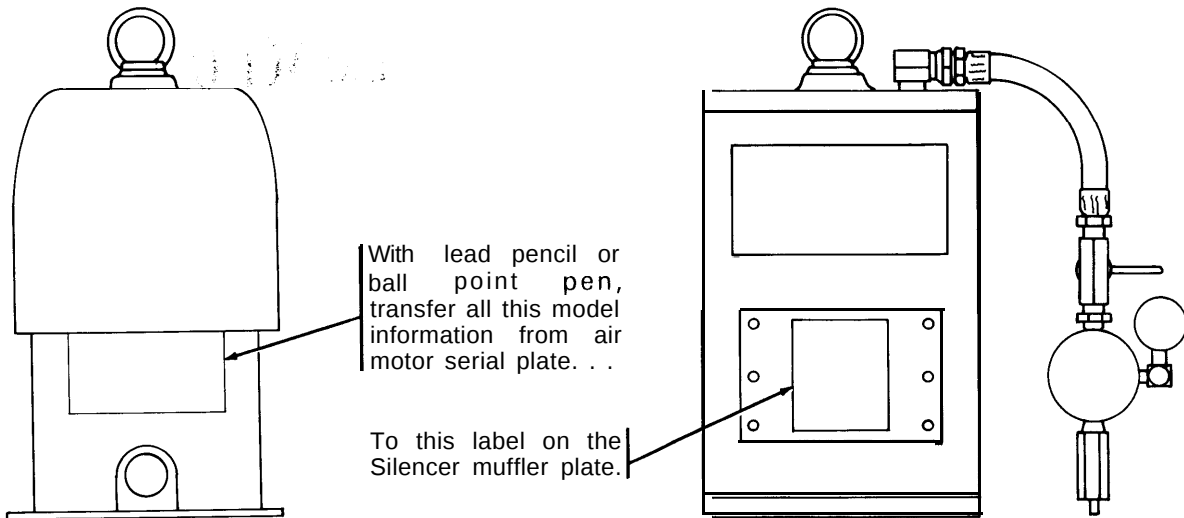

Remove air inlet union from top of pump.

Loosen screws holding air motor to pump mounting and raise motor slightly.

NOTE: The flexible gaskets (3) are slit to allow easy placement without removing pump. Position slit toward back of air motor.

Assemble the gaskets (3) and 2-piece flange (4) around pump so one gasket fits inside the rim of the flange and the other is positioned below the flange. Align the screw holes of these pieces with those of the pump mounting. Lower air motor onto gaskets and flange and screw into place.

Install the front shield (6) so the slotted section fits over the riser tube outlet (A), then install the back shield (5) on opposite side.

Place top cover (7) over assembly and screw adapter (2) into pump air inlet.

Insert all screws (1) and tighten.

Screw air inlet union into adapter and connect hoses as instructed in separate pump operating manual.

To Mount On Wall Bracket

Assemble air motor silencer as above.

Position the pump on wall bracket so air inlet union is parallel to wall.

If an air regulator is to be added, mount to wall bracket as shown on cover.

NOTE: It may be necessary to drill an additional 3/8 diameter hole in bracket to mount regulator.

WARNING

Do not restrict or -plug the air exhaust outlet. Plugging or restricting the exhaust causes undue air pressure which may rupture the air motor silencer.

THE GRACO WARRANTY

Graco Inc. warrants all equipment manufactured by it and bearing its name to be free from defects in material and workmanship under normal use and service. This warranty extends to the original purchaser for a period of 12 months from the date of purchase and applies only when the equipment is installed and operated in accordance with written factory recommendations. This warranty does not cover damage or wear which, in the reasonable judgment of Graco, arises from misuse, abrasion, corrosion, negligence, accident, substitution of non-Graco parts, faulty installation or tampering.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective for examination by Graco to verify the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge, any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in workmanship or material, repairs will be made at a reasonable charge and return transportation will be charged.

THIS LIMITED WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES (EXPRESS OR IMPLIED) INCLUDING WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND OF ANY NON-CONTRACTUAL LIABILITIES INCLUDING PRODUCT LIABILITIES BASED ON NEGLIGENCE OR STRICT LIABILITY. EVERY FORM OF LIABILITY FOR DIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR LOSS IS EXPRESSLY EXCLUDED AND DENIED.

EQUIPMENT NOT COVERED BY GRACO WARRANTY. Accessories or components of equipment sold by Graco that are not manufactured by Graco (such as electric motors, switches, hose, etc.) are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making such claims.

Factory Branches: Atlanta, Cleveland, Dallas, Detroit (Southfield), Los Angeles, West Caldwell (N.J.)
Subsidiary and Affiliate Companies: Canada; England; Switzerland; France; Germany; Hong Kong; Japan

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440

PRINTED IN U.S.A. 307-342 11-78 Revised 4-79