Instructions – Parts List

QUICK KNOCK DOWN PUMP WITH NON-SPARKING CONSTRUCTION Mining Pump

307962 rev.H

10:1 Ratio President Pump

1000 psi (7.0 MPa, 70 bar) Maximum Working Pressure

222167, Series B



Read warnings and instructions. See page 2 for **Table of Contents.**

WARNING

This pump is specially designed with non-sparking construction. Interchange of any part for repair or improvement of the pump, including the air motor, must be with identical parts bearing the same part numbers given on pages 13–15. To reduce the risk of a fire or explosion and serious injury, the use of any other parts is prohibited.



01605

PROVEN QUALITY. LEADING TECHNOLOGY.

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441 Copyright 1989, Graco Inc. is registered to I.S. EN ISO 9001

Table of Contents

Warnings 2
Installation 5
Operation
Troubleshooting
Air Motor Service 10
Displacement Pump Service 12
Parts
Dimensions 16
Mounting Hole Layout 16
Technical Data 17
Warranty
Graco Information 18

Symbols

Warning Symbol

This symbol alerts you to the possibility of serious injury or death if you do not follow the corresponding instructions.

Caution Symbol



This symbol alerts you to the possibility of damage to or destruction of equipment if you do not follow the corresponding instructions.



afa	INJECTION HAZARD				
	Spray from the gun/valve, hose leaks, or ruptured components can inject fluid into your body and cause extremely serious injury, including the need for amputation. Fluid splashed in the eyes or on the skin can also cause serious injury.				
	• Fluid injected into the skin might look like just a cut, but it is a serious injury. Get immediate medi- cal attention.				
	 Do not point the gun/valve at anyone or at any part of the body. 				
	 Do not put your hand or fingers over the spray tip/nozzle. 				
	 Do not stop or deflect leaks with your hand, body, glove or rag. 				
	 Do not "blow back" fluid; this is not an air spray system. 				
	 Always have the tip guard and the trigger guard on the gun when spraying. 				
	Check the gun diffuser operation weekly. Refer to the gun manual.				
	 Be sure the gun/valve trigger safety operates before spraying/dispensing. 				
	 Lock the gun/valve trigger safety when you stop spraying/dispensing. 				
	• Follow the Pressure Relief Procedure on page 6 whenever you: are instructed to relieve pressure; stop spraying/dispensing; clean, check, or service the equipment; and install or clean the spray tip/nozzle.				
	Tighten all fluid connections before operating the equipment.				
	• Check the hoses, tubes, and couplings daily. Replace worn, damaged, or loose parts immediately. Permanently coupled hoses cannot be repaired; replace the entire hose.				
	 Use only Graco approved hoses. Do not remove any spring guard that is used to help protect the hose from rupture caused by kinks or bends near the couplings. 				
	MOVING PARTS HAZARD				
	Moving parts, such as the air motor piston, can pinch or amputate your fingers.				
	 Keep clear of all moving parts when starting or operating the pump. 				
	• Before servicing the equipment, follow the Pressure Relief Procedure on page 6 to prevent the equipment from starting unexpectedly.				

A WARNING



FIRE AND EXPLOSION HAZARD

Improper grounding, poor ventilation, open flames or sparks can cause a hazardous condition and result in a fire or explosion and serious injury.

- Ground the equipment and the object being sprayed. Refer to Grounding on page 5.
- If there is any static sparking or you feel an electric shock while using this equipment, **stop spraying/dispensing immediately.** Do not use the equipment until you identify and correct the problem.
- Provide fresh air ventilation to avoid the buildup of flammable fumes from solvents or the fluid being sprayed/dispensed.
- Keep the spray/dispense area free of debris, including solvent, rags, and gasoline.
- Electrically disconnect all equipment in the spray/dispense area.
- Extinguish all open flames or pilot lights in the spray/dispense area.
- Do not smoke in the spray/dispense area.
- Do not turn on or off any light switch in the spray/dispense area while operating or if fumes are present.
- Do not operate a gasoline engine in the spray/dispense area.
- This pump is specifically designed with non-sparking construction. Interchange of any parts for repair or improvement of the pump, including the air motor, must be with identical parts bearing the same part numbers given on page 13–15. To reduce the risk of fire or explosion and serious injury, the use of any other parts is prohibited.
- Never use 1,1,1–trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in pressurized aluminum equipment. Such use could result in a chemical reaction, with the possibility of explosion.
- то

TOXIC FLUID HAZARD

Hazardous fluid or toxic fumes can cause serious injury or death if splashed in the eyes or on the skin, inhaled, or swallowed.

- Know the specific hazards of the fluid you are using.
- Store hazardous fluid in an approved container. Dispose of hazardous fluid according to all local, state and national guidelines.
- Always wear protective eyewear, gloves, clothing and respirator as recommended by the fluid and solvent manufacturer.

Installation

Grounding



FIRE AND EXPLOSION HAZARD Before operating the pump, ground the system as explained below. Also read the section FIRE AND EXPLOSION HAZARD on page 4.

To reduce the risk of static arcing, ground the pump and all other spray equipment used or located in the spray area. CHECK your local electrical code for detailed grounding instructions for your area and type of equipment. BE SURE to ground all of this spray equipment:

- 1. *Pump:* loosen grounding lug locknut (A) and washer. Insert one end of a 12 ga (1.5 mm2) minimum groundwire (B) into slot in lug (C) and tighten locknut securely. See Fig. 1. Connect the other end of the wire to a true earth ground. Always check your local code. Order Part No. 237569.
- 2. Air hoses: use only electrically conductive air hoses.
- 3. *Fluid hoses*: use only electrically conductive fluid hoses.
- 4. *Air compressor:* follow the manufacturer's recommendations.

- 5. *Dispensing valve:* grounding is obtained through connection to a properly grounded fluid hose and pump.
- 6. *Fluid supply container:* according to your local code.
- 7. *Object being sprayed*: according to your local code.
- 8. All solvent pails used when flushing, according to local code. Use only metal pails, which are conductive, placed on a grounded surface. Do not place the pail on a non-conductive surface, such as paper or cardboard, which interrupts the grounding continuity.
- 9. To maintain grounding continuity when flushing or relieving pressure, always hold a metal part of the valve firmly to the side of a grounded metal pail, then trigger the valve.



Operation

Pressure Relief Procedure

WARNING

INJECTION HAZARD

Fluid under high pressure can be injected through the skin and cause

serious injury. To reduce the risk of an injury from injection, splashing fluid, or moving parts, follow the **Pressure Relief Procedure** whenever you:

- are instructed to relieve the pressure,
- stop spraying,
- check or service any of the system equipment,
- or install or clean the spray tips.

- 1. Shut off the air to the pump. Disconnect the air hose to be sure pressure is relieved in the air motor.
- 2. If the pump or hose is not clogged and the hose is not closed off, fluid pressure will be relieved.
- If the pump or hose is clogged, wrap a heavy cloth around the hose coupling at the pump outlet. Slowly unscrew the hose to relieve pressure gradually and reduce splashing.
- 4. If the clog does not appear to be in the hose, clamp the pump outlet housing in a vise, and hammer the intake valve lug nut to unscrew it. This should relieve pressurized material trapped in the pump.

Operation

WARNING

To reduce the risk of static arcing which could result in a fire or explosion and serious injury, use only non-sparking tools if the pump is being assembled or worked on in a hazardous atmosphere.

Pump Assembly

- Remove the cotter pin from the connecting rod. Screw the connecting rod into the air motor rod until the pin holes align. Install the pin. Bend the ends of the pin tightly and smoothly around the connecting rod. This is to avoid scratching the cylinder during operation. Push the displacement rod up and engage the threads of the upper lug nut in the air motor base. Hand tighten the lug nut and then secure by tapping the lug nut with a hammer.
- Connect a grounded air hose to the air inlet. Provide an air regulator to control pump speed and pressure. To help protect the air motor, provide an air motor lubricator.
- **NOTE:** If an air motor lubricator is not used, manually lubricate the motor each day. Close the air regulator. Remove the air inlet hose and squirt several drops of SAE 10 motor oil into the air inlet. Attach the hose and run the pump slowly for a couple of minutes to distribute the oil.
- 3. Connect a suitable hose to the 3/4 npt fluid outlet. Connect a dispensing valve to the hose.
- 4. Connect a ground wire to the pump grounding lug. Connect the other end of the ground wire to known ground. See **Grounding** on page 5.

Wet All Internal Parts of the Pump and Hose

A dry pump and hose draws moisture out of the material being pumped, which contributes to pump clogs. To reduce clogging, flush the pump and hose with clean water before priming it with material.

Regular Operation

- 1. Mix the material thoroughly to remove all lumps. Pay particular attention to the corners and sides of the mixing container.
- 2. Mount the pump in the mixing container.
- **NOTE:** If the pump was flushed with water, direct the hose into a waste container until all water is displaced with material.

3. Supply air to the pump. Always open the air regulator slowly and then increase pressure gradually until the pump is running smoothly. Use the lowest pressure necessary to give the desired results.

To Stop Dispensing

Shut off the air supply to the pump and **relieve the pressure**.



Operation

If the Pump Will Not Be Used for Five Minutes or Longer

- 1. Remove the pump from the mixing container. Turn on the air and direct the material flow into the mixing container. Flush the pump with clean water until thoroughly cleaned. Use the outlet hose to clean the outside of the pump.
- **NOTE:** If material has leaked through the weep holes on either side of the motor base, direct the outlet hose into these holes and flush thoroughly.
- 2. Remove the outlet hose, and then turn the pump upside down to drain. This helps prevent rust.

If the Pump is Being Stored

Clean the pump thoroughly to reduce rust. Flush with water and disassemble the pump if further cleaning is needed. Turn the pump upside down to drain the water out. Flush again with a rust inhibiting chemical.

If the Pump or Hose Clogs

WARNING

If the pump or the hose clogs, use extreme caution to avoid splashing material in your eyes while clearing the clog. Follow the procedure below.

- 1. Shut off the air supply to the motor.
- 2. Wrap a heavy cloth around the hose coupling at the pump outlet. Slowly unscrew the hose to relieve pressure gradually and reduce splashing.
- If the clog does not appear to be in the hose, hammer the intake valve lug nut to loosen it and then unscrew it. This should help relieve pressurized material trapped in the pump.
- 4. Clean the intake valve and reassemble it. Flush the pump.
- 5. *If the piston check valve is clogged,* relieve pressure. Remove the intake valve and then remove the air motor. See page 10. Push the throat packing assembly out of the pump cylinder. Clean the pump and replace the throat packing assembly. See page 12.
- 6. If the pump is still clogged, shut off the air to the pump. Disassemble the pump and clean it thoroughly. See page 12.

Troubleshooting

A WARNING

To reduce the risk of serious injury whenever you are instructed to relieve pressure, always follow the **Pressure Relief Procedure** on page 6.

Before servicing this equipment always make sure to **Relieve the Pressure**.

Check all possible problems and solutions before disassembling the pump.

Problem	Cause	Solution
Excess material leaks from the weep holes in the base of the motor.	Worn throat packings	Flush the weep holes when flushing the pump. Replace the throat pack-ings.
Pump doesn't build pressure.	Worn piston and/or throat packings	Replace the packings.
Pump is clogged.	Material has dried in the pump	Flush pump more frequently; replace packings as needed.
	Material is too dry	Add water.
	Pump and hose not flushed with water before pumping grout	Wet hose and pump with water before pumping grout. See page 7.
Motor leaks air or stops	Lack of lubrication	Rebuild motor, and inject oil into air in- let daily.

A WARNING

This pump is specially designed with non-sparking construction. Interchange of any part for repair or improvement of the pump, including the air motor, must be with identical parts bearing the same part numbers given on pages 13–15. To reduce the risk of a fire or explosion and serious injury, the use of any other parts is prohibited.

Air Motor Service

WARNING

To reduce the risk of serious injury whenever you are instructed to relieve pressure, always follow the Pressure Relief Procedure on page 6.

WARNING

Never operate the pump with the air motor plates removed. The air motor piston, located behind the air motor plates, moves when air is supplied to the motor. Moving parts can pinch or amputate your fingers or other body parts.

To reduce the risk of static arcing which could result in a fire or explosion and serious injury, use only non-sparking tools if the pump is being assembled or worked on in a hazardous atmosphere.

NOTE: Reference letters in parentheses in the text refer to the figure illustrations.

Restarting a Stalled Air Motor

- 1. Relieve the pressure. This usually reseats the air transfer valves. Reconnect the air and turn it on.
- 2. If the air transfer valves do not reseat, screw the cap nut (131) out of the cylinder (115), pull up on the trip rod (101) and screw the cap nut back into the cylinder. See Fig 3.

Replacing the Throat Bearing

- Relieve pressure. 1.
- 2. Disconnect the displacement pump from the motor.
- 3. Remove the warning plate (128) from the motor base. See Fig 3.
- Use a 1/4 in. punch to unscrew the bearing (125). 4. See Fig 3.
- 5. Reassemble in the reverse order of disassembly. Be sure the air motor plates are installed before operating the motor. 307962

Repairing the Air Motor

To reduce the risk of damaging parts:

Use special pliers, Part No. 207579, when handling the trip rod. Damage to the surface of the trip rod can result in erratic air motor operation.

Always lift the cylinder straight up off the piston. Never tilt the cylinder as it is being removed.

WARNING

Always keep fingers clear of the toggle assemblies (B) to avoid pinching or amputating them. See Fig. 3.

- 1. Relieve the pressure.
- 2. Remove the displacement pump. See page 12.
- 3. From below the motor base (102), push up the piston rod. Unscrew the cap nut (131) just until you can pull up the cap nut and then grasp the trip rod (101) with the special padded pliers. Remove the cap nut. See Fig 3.
- 4. Remove the screws (105). Carefully pull the cylinder straight up off of the piston. See Fig 3.



10

Air Motor Service



NOTE: Refer to Fig. 4 for Steps 5 to 21.

- 5. Use a screwdriver to push down on the yoke (107) and snap the toggle assemblies (B) down.
- 6. Remove the lockwires (118) and upper adjusting nuts (114A) from the air transfer valves (C).
- 7. Screw the stems (113) out of the grommets (111) and lower adjusting nuts (114B).
- 8. Remove the poppets (112) and inspect them for cracks.
- Grip the rocker (109) with pliers, compress the spring (110), swing the toggle assembly (B) up and away from the piston lugs (D). Remove the parts.
- 10. Inspect the actuator (119) to be sure it is supported by the spring clips (116a), but slides into them easily.
- 11. Remove the yoke (107), actuator (119) and the trip rod (101).
- 12. Remove the poppets (120): stretch them out and cut them with a sharp knife.
- 13. Pull the piston (116) out of the base (102). Remove the o-ring (124) in the base casting.
- 14. Clean all parts thoroughly and inspect for wear or damage. Inspect the polished surfaces of the piston, piston rod and cylinder walls for scratches or wear. Replace parts as necessary. Lubricate all parts with a light waterproof grease.

- Install the o-ring (124) in the groove inside the base (102). Install the o-ring (123) around the rim of the base. Install the o-ring (121) around the piston (116c). Slide the piston rod down into the base (102).
- 16. Pull the poppets (120) into the actuator (119) and clip off the top part of the poppets as shown with dotted lines. See the **Cutaway View**.
- 17. Install the poppets (112) on the stems (113). Reassemble the stems (113), grommets (111), adjusting nuts (114A,114B). Install the wires (118). Turn the ends of the wires up to hold them in place.
- 18. Install the trip rod (101), actuator (119), yoke (107) and the toggle assemblies (B) on the piston (116).
- 19. Adjust the stems (113) so there is a 0.145 in. (3.68 mm) clearance between the poppets (112) and the piston (116) when the toggle assemblies are in the down position. See the **Cutaway View**. Special gauge, Part No. 171818, is available.
- 20. With the toggle assemblies (B) in the up position, install the cylinder (115) and the cap nut (131).
- 21. Reassemble the air motor to the displacement pump. Before mounting the pump, connect an air hose to the air motor and run the pump to be sure it operates smoothly.

Displacement Pump Service

To reduce the risk of static arcing which could result in a fire or explosion and serious injury, use only non-sparking tools if the pump is being assembled or worked on in a hazardous atmosphere.

A WARNING

To reduce the risk of serious injury whenever you are instructed to relieve pressure, always follow the **Pressure Relief Procedure** on page 6.

- **NOTE:** A displacement pump repair kit, part no. 224902, is available. Use all the parts in the kit for the best results.
- 1. Relieve the pressure.
- 2. Lay the pump on a work table.
- 3. Hammer off the upper lug nut (2). Grasp the outlet housing (10) and pull the displacement pump down until the pin (4) is exposed. Push out the pin.
- 4. Clamp the intake housing (19) in a vise. Hammer off the lower lug nut (21). Disassemble the intake valve. Inspect the seat in the intake housing (19) for pitting or gouging that would prevent the ball from seating properly and replace the part if necessary. Replace the ball (18) and o-ring (20*).
- 5. Tap the displacement rod (3) assembly out the bottom of the pump.
- Clamp the piston housing (13) in a padded vise. Use a wrench on the flats to unscrew the piston seat (22). Remove the lower u-cup packing (15*), spacer (27), and the ball (14).
- Using wrenches on the flats, unscrew the piston rod (12) from the displacement rod (5).
- 8. Remove the throat packings (8* and 25*), washer (24*) and nut (9).
- 9. Inspect the cylinders (6 and 11) and the outlet housing (10) for wear or damage. Disassemble these parts only if they are being replaced, and then replace the o-rings (23* and 20*), also.
- 10. Clean all parts thoroughly and inspect for wear or damage. Replace parts as needed.
- 11. Reassemble the pump in the reverse order of disassembly. Be sure the nut (9) is turned down to the bottom thread of the piston rod (12), before installing the washer and throat packings.

- Apply Lubricant
 - 2 Apply thread sealant.
 - 3 Torque rod to housing to 130–150 in–lb.
- 4 Torque to 130–150 in–lb.
- 5 Torque to 35–50 ft–lb.
- 6 Torque piston seat to housing to 15 to 20 ft-lb.
- $\overline{7}$ Bottom nut on thread of rod.
- Apply Lubricant 4 ⁄8` 25' *8 24* 23*/1 10 *20 14 27 16 21 20*/1\ 19 17 18 01606 Fig 5

Parts

USE GENUINE GRACO PARTS AND ACCESSORIES

DISPLACEMENT PUMP

Model 222173, Series C Includes items 1 to 27

REF NO.	PART NO.	DESCRIPTION QT
1	183934	COLLAR
2	183918	NUT, lug
3	183928	COUPLING; cst
4	222406	PIN, coupling
5	183932	ROD, displacement; cst
6	183936	CYLINDER, upper; cst
8*	188739	PACKING, u–cup, upper; urethane
9	100111	NUT. hex iam: 1/2–20
10	183914	HOUSING, outlet;
		cast iron
11	183935	CYLINDER, lower; cst
12	183931	ROD, piston; cst
13	157184	HOUSING, piston; cst
14	100279	BALL, piston; cst
15*	188738	PACKING, u–cup, lower;
		urethane
16	183933	COLLAR
17	183925	PIN, ball stop; cst
18	108001	BALL, intake; sst
19	183912	HOUSING, intake;
0.0+	100000	cast iron
20^	108993	O-RING; buna-N
21	183916	NUT, lug
22	105010	SEAT, piston; cst
23	100050	VASHED plain 1/0"
24 05*	109052	NASHER, plain, 1/2
20 26*	100920	DING, Dackup, CSt DINL cottor: 1.25"
20 07	10220	SPACED: aluminum
21	10/3/3	SFAUED, alullillulli

*Included in Repair Kit 224902. Purchase separately.



Parts

PRE Mod	SIDENT AI el 222171,	R MOTOR Series B		REF NO.	PART NO.	DESCRIPTION	QTY
REF NO.	PART NO.	DESCRIPTION	QTY	106† 107 108 109	156698 158360 158362 158364	O–RING, buna–n YOKE, rod, trip PIN, toggle ROCKER, toggle	1 1 2 2
101 102 104 105	207150 183804 100078 101578	TRIP ROD BASE, motor, air SCREW, hex head, 8–32 x .38 in. SCREW , hex head, 8–32 x .38 in.	1 1 Ig. 20 Ig. 8	110 111* 112* 113* 114* 115 116	167585 158367 170708 160896 160261 183911 207391	SPRING, compression GROMMET, rubber, POPPET, valve, urethane STEM, valve NUT, adjusting CYLINDER, motor, air PISTON	2 2 2 2 4 1
		131		116a† 116b 116c 118*	158361 102975 160618	includes items 116a to 116c .CLIP, spring .SCREW, rd hd mach; 6–32 x 0.25 .BARE PISTON not sold separately LOCKWIRE, transfer valve	1 2 7 2 7 1 2
				120* 121* 122 123 124* 125	158359 170709 158378 160623 158377 158379 222618	POPPET, valve, urethane PACKING, o-ring;nitrile rubber ARM, toggle SEAL, flat ring;nitrile rubber PACKING, o-ring;nitrile rubber PACKING NUT	1 2 1 2 1 1
108		So 107 119		125a1 125b 125c 126▲ 127▲	110233 101526 166203 180233 185357	includes items 125a to 125c .SEAL, wiper, leather .BEARING, bronze .HOUSING, bearing LABEL, warning PLATE, WARNING	1 1 1 2 1
110 109		114* 120* 101		128 129 130 131 132 133	185356 150647 166235 164704 104582 104029	PLATE, identification GASKET, copper ROD, piston CAP NUT, with handle WASHER, tab LUG, grounding	1 1 1 1 1
116	116b 116a			134 135 136	110228 178270 183937 125 ,124*	COTTER PIN PLATE, muffler SPACER *Included in Motor Repa	1 2 1 nir Kit
	116c *121				123	207385. Purchase separatel ▲Extra warning labels and available at no cost.	y. plates
						†Recommended spare pa keep on hand.	rts to
	*112 129 *113		· · · · ·			127	
	130					└─135 ^{──} └──133 ──132	
	134		-135 -128 -104	ð-	126▲ 136		

Parts

PRESIDENT PUMP Model 222167, Series B Includes items 201 to 202

REF NO.	PART NO.	DESCRIPTION	QTY
201	222171	MOTOR, air, President see parts on page 14	1
202	222173	PUMP, displacement see parts on page 13	1

This pump is specially designed with non-sparking construction. Interchange of any part for repair or improvement of the pump, including the air motor, must be with identical parts bearing the same part numbers given on pages 13–15. To reduce the risk of a fire or explosion and serious injury, the use of any other parts is prohibited.



Dimensions







President Pump – Technical Data

Pump

Ratio 10:1
Maximum Fluid Delivery
(Intermittent Duty) 2.6 gpm (10 lpm) at 60 cpm
Cycles Per Gallon 23.3
Air Operating Range 20 to 100 psi (110–700 kPa, 1 to 7 bar)
Maximum Discharge Pressure 1000 psi (7 MPa, 70 bar)
Maximum Pump Operating
Temperature 140° F (60°C)
Air Inlet Size 1/2 npt(f)
Fluid Outlet Size
Wetted Parts Cast Iron, Carbon Steel, 440 Stainless Steel, Zinc-Plating, Aluminum, Urethane, buna-N
Non-wetted Parts Cast Iron, Carbon Steel
Weight (pump and motor) 50.5 lb (25.3Kg)

Motor

Maximum inbound air pressur	e 100 psi
	(0.7 MPa, 7 bar)
Effective piston area	14 sq. in. (90 cm ²)
Effective piston diameter	4.25" (108 mm)
Stroke	4" (102 mm)
Air Valves	Urethane
Valve mechanism	Balanced; detented
Seal	Nitrile rubber
Weight	34.5 lb (15.5 kg) approx.



Graco Standard Warranty

Graco warrants all equipment manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale by an authorized Graco distributor to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non–Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

Graco makes no warranty, and disclaims all implied warranties of merchantability and fitness for a particular purpose in connection with accessories, equipment, materials or components sold but not manufactured by Graco. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés à la suite de ou en rapport, directement ou indirectement, avec les procedures concernées.

Graco Information

TO PLACE AN ORDER, contact your Graco distributor, or call one of the following numbers to identify the distributor closest to you: 1–800–367–4023 Toll Free 612–623–6921

612–378–3505 Fax

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

> Sales Offices: Minneapolis, Detroit International Offices: Belgium, Korea, Hong Kong, Japan

www.graco.com PRINTED IN USA 307962 05/1995, Revised 07/2002