

INSTRUCTIONS-PARTS LIST

KEEP FOR REFERENCE



308-227

Rev A

BRAKE KIT, 235-456

For the Graco Line Lazer


Installation

1. Shut off the sprayer, trigger the gun to relieve fluid pressure, and open the drain valve.
2. Remove the pump inlet hose.
3. Mount the bracket to the rear of the cart on the outside of the cart handle. Use the existing hardware.
4. Slide brake handle onto the brake rod to the position shown.
5. Slide the brake handle between the front and rear tires.
6. Slide the brake handle over the axle and pull it to the rear of the cart.
7. Align the handle with the bracket and install the pivot pin, washer and cotter pin.

Operation

NOTE: For the most positive brake engagement, make sure there is proper tire pressure and that tire wear is not excessive.

Lift the brake handle to engage the brake and lower the handle to disengage the brake.

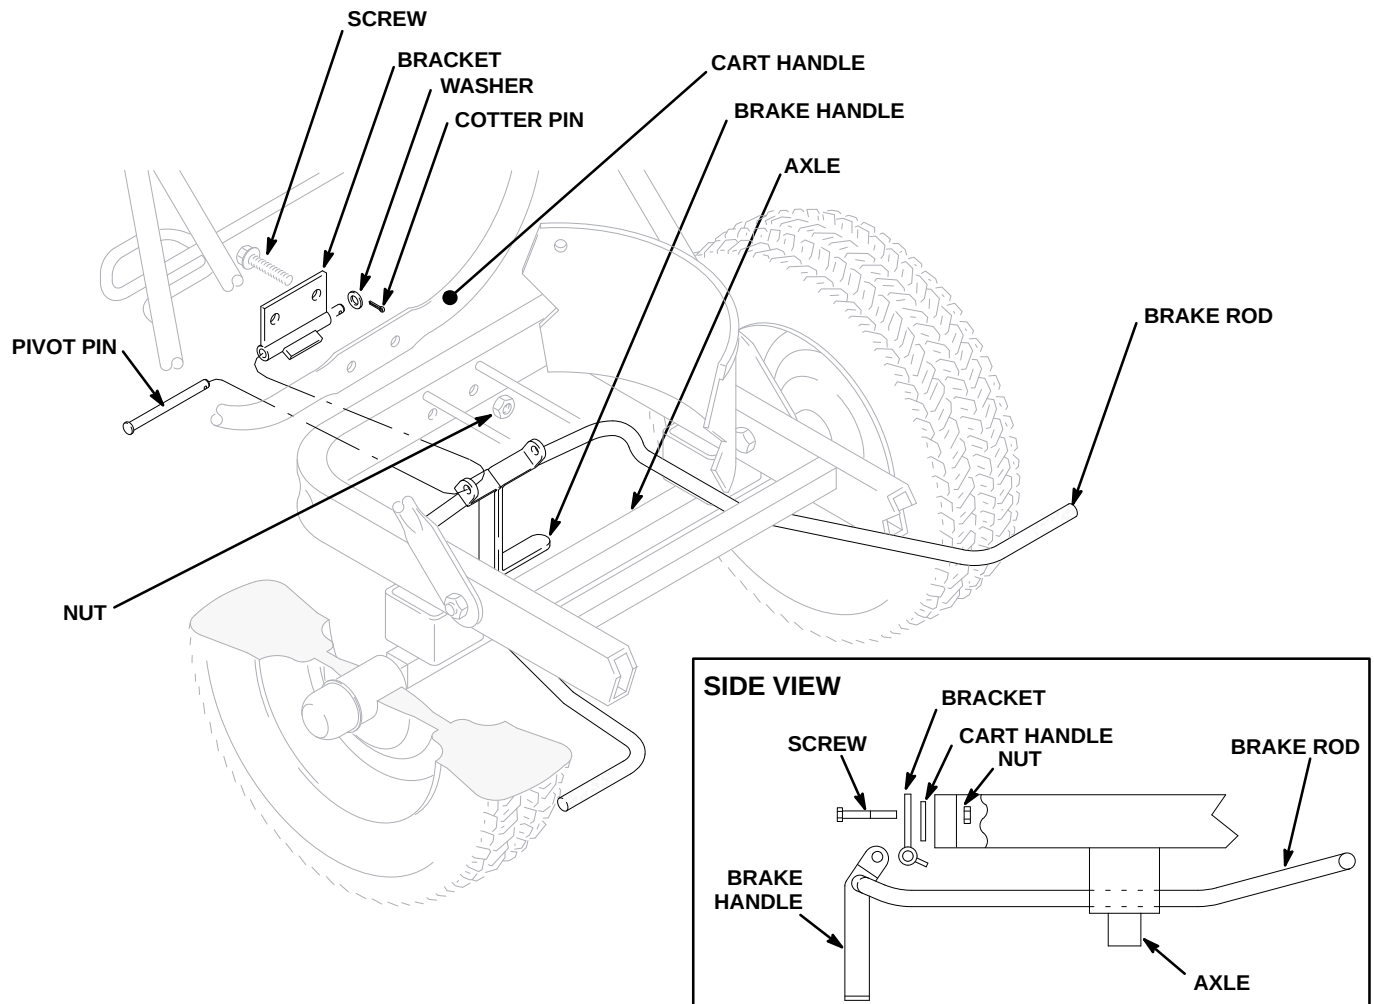

Factory Branches: Atlanta, Chicago, Dallas, Detroit, Los Angeles, Mt. Arlington (N.J.)

Subsidiary and Affiliate Companies: Canada; England; Korea; Switzerland; France; Germany; Hong Kong; Japan

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

PRINTED IN U.S.A. 308-227 6/92