INSTRUCTIONS-PARTS LIST



308-541

Rev A Supersedes 801–746

This manual contains **IMPORTANT** WARNINGS and **INSTRUCTIONS** READ AND RETAIN FOR REFERENCE


ADJUSTABLE NOZZLE

3000 psi (207 bar) MAXIMUM WORKING PRESSURE

MODEL 800-118

Used with chemical injector kits. Eliminates the need for a separate low pressure chemical tip. Enables user to go from a high pressure spray of the desired spray angle to a low pressure spray for chemical application. Reduces the risk of tip assembly loss by eliminating the need to change tips.

SPRAY TIP NOT INCLUDED-

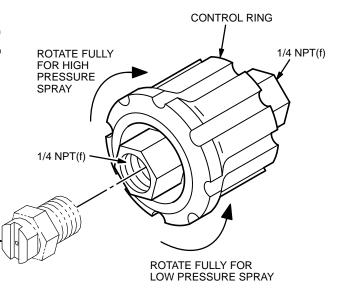

INSTALLATION

Pressure Relief Procedure

To reduce the risk of serious bodily injury, including fluid injection and splashing in the eyes or on the skin, always follow this procedure whenever you stop spraying for more than 10 minutes, when shutting down, and before checking or repairing any part of the system.

- 1. Engage the trigger safety latch.
- 2. Turn the sprayer off.
- 3. Remove the ignition cable from the spark plug, disconnect the air or disconnect the electricity.
- 4. Shut off the water supply.
- 5. Disengage the trigger safety latch and trigger the gun to relieve pressure, and then engage the trigger safety latch again.
- 1. Mount a high pressure spray tip in the nozzle. Use pipe thread sealant or PTFE tape on all threaded connections.
- 2. Attach adjustable nozzle to the end of the wand. Use pipe thread sealant or PTFE tape on all threaded connections.

OPERATION

- 1. Start the pressure washer as described in its pressure washer instruction manual.
- For high pressure spray, turn the nozzle's control ring completely counterclockwise (as viewed from the tip end). This causes the water flow to be directed through the high pressure tip only. Engage the gun trigger safety before turning control ring.
- 3. For low pressure chemical application, turn the nozzle's control ring clockwise (as viewed from the tip end). This causes the water flow to be directed through the large opening around the high pressure spray tip. This also activates the downstream chemical injector. Engage gun trigger safety before turning the control ring.

– Warning –

To reduce the risk of injury do not turn the control ring when the spray gun is in use. Be sure to engage the gun trigger safety before turning the control ring.

Wetted Parts: Brass

GRACO INC. P.O. Box 1441 MINNEAPOLIS, MN 55440-1441

©COPYRIGHT 1991, GRACO INC.

THE GRACO WARRANTY

WARRANTY AND DISCLAIMERS

Graco warrants all equipment manufactured by it and bearing its name to be free from defects in material and workmanship on the date of sale by an authorized Graco distributor to the original purchaser for use. As purchaser's sole remedy for breach of this warranty, Graco will, for a period of twelve months from date of sale, repair or replace any part of the equipment proven defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for, any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non–Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility with Graco equipment of structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective for examination by Graco to verify the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor and transportation.

DISCLAIMERS AND LIMITATIONS

THE TERMS OF THIS WARRANTY CONSTITUTE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY AND ARE IN LIEU OF ANY OTHER WARRANTIES (EXPRESS OR IMPLIED), INCLUDING WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, AND OF ANY NON-CONTRACTUAL LIABILITIES, INCLUDING PRODUCT LIABILITIES, BASED ON NEGLIGENCE OR STRICT LIABILITY. EVERY FORM OF LIABILITY FOR DIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR LOSS IS EXPRESSLY EXCLUDED AND DENIED. IN NO CASE SHALL GRACO'S LIABILITY EXCEED THE AMOUNT OF THE PURCHASE PRICE. ANY ACTION FOR BREACH OF WARRANTY MUST BE BROUGHT WITHIN TWO (2) YEARS OF THE DATE OF SALE.

EQUIPMENT NOT COVERED BY GRACO WARRANTY

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WITH RESPECT TO ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motor, switches, hose, etc.) are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

IMPORTANT PHONE NUMBERS

TO PLACE AN ORDER, contact your Graco distributor, or call this number to identify the distributor closest to you: 1–800–328–0211 Toll Free

FOR TECHNICAL ASSISTANCE, service repair information or assistance regarding the application of Graco equipment: 1–800–543–0339 Toll Free

Factory Branches: Atlanta, Chicago, Dallas, Detroit, Los Angeles, West Caldwell (N.J.) **Subsidiary and Affiliate Companies:** Canada; England; Switzerland; France; Germany; Hong Kong; Japan; Korea

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440–1441

PRINTED IN U.S.A. 308-541 5/91