



INSTRUCTIONS

This manual contains important warnings and information.  
**READ AND KEEP FOR REFERENCE.**

## RoadLazer™ 55–Gallon Agitator Kit

100 psi (7 bar, 0.7 MPa) Maximum Working Pressure

### Model 239935, Series A

#### Pressure Relief Procedure

#### **WARNING**



##### **INJECTION HAZARD**

The system pressure must be manually relieved to prevent the system from starting or spraying accidentally. Fluid under high pressure can be injected through the skin and cause serious injury. To reduce the risk of an injury from injection, splashing fluid, or moving parts, follow the **Pressure Relief Procedure** whenever you:

- are instructed to relieve the pressure,
- stop spraying,
- check or service any of the system equipment,
- install or clean the spray tip.

1. Set hydraulic bypass valve to BYPASS position.
2. Stop engine by turning key to OFF position.
3. Place empty pail under paint guns to catch drainage.

4. Relieve hose pressure: use Programmable Skip-line Controller to trigger each gun for at least 3 seconds each.
5. Close paint gun ball valves.
6. Place empty pail under paint drain valves to catch drainage.
7. Open all drain valves, one at a time.
8. Close valves immediately to prevent paint from drying in system.
9. Relieve beads system pressure by turning bead system valve to OFF position

If you suspect that the spray gun or hose is completely clogged, or that pressure has not been fully relieved after following the steps above, **very slowly** loosen the hose end coupling and relieve pressure gradually, then loosen completely. Now clear the valve or hose.

## Installation

1. Follow **Pressure Relief Procedure** on page 1.
2. Install Auxiliary Air Kit 240496 per manual 308831.
3. Install agitator on paint drum per manual 308175.

**Note:** Use pipe sealant (8) on all threads.

4. Install 1/8 in. air nipple (4) on agitator.
5. Install coupling (7) and coupler (5) on air hose (2).
6. Connect air hose (2) to 1/8 in. air nipple (4).
7. Connect adapter (6) and fitting (3) to air hose. Connect air hose (2) to air line coupler (10).

## Operation


1. Follow **Pressure Relief Procedure** on page 1.
2. Turn on Road Lazer per manual 308611.
3. Turn on Agitator per manual 308175.

## Cleaning

1. Follow **Pressure Relief Procedure** on page 1.
2. Clean Agitator per manual 308175.

## Parts

Ref No.	Part No.	Description	Qty.
1	235534	AGITATOR, helix, sst	1
2	109132	HOSE, coupled	1
3	169967	FITTING, line, air	1
4	169969	FITTING, line, air	1
5	208536	COUPLER, line air	1
6	159842	ADAPTER	1
7	150287	COUPLING	1
8	119400	SEALANT, pipe, sst	1

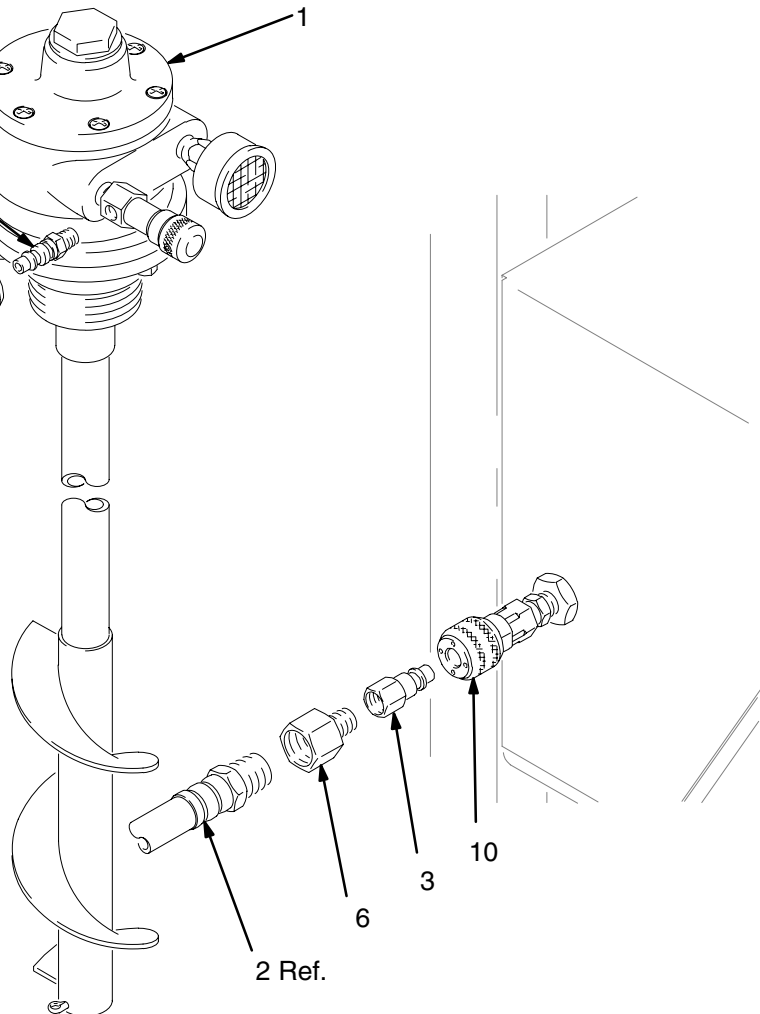

8283A

*All written and visual data contained in this document reflects the latest product information available at the time of publication.  
Graco reserves the right to make changes at any time without notice.*

**Sales Offices:** Minneapolis  
**International Offices:** Belgium, Korea, Hong Kong, Japan

**GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441**

**<http://www.graco.com>**

©1998 Graco Inc. 308795 Rev. C 10/2004 PRINTED IN U.S.A.