Instructions

RAM / INDUCTOR / FOLLOWER PLATE Bulk Grease Transfer Packages

Model No. 244638, 65:1 King Ram

64 psi (0.4 MPa, 4.4 bar) Maximum Air Input Pressure 4200 psi (29 MPa, 290 bar) Maximum Fluid Working Pressure

Model No. 244639, 55:1 Bulldog Ram

76 psi (0.5 MPa, 5.2 bar) Maximum Air Input Pressure 4200 psi (29 MPa, 290 bar) Maximum Fluid Working Pressure

Model No. 244640, 12:1 Bulldog Ram

100 psi (0.7 MPa, 7 bar) Maximum Air Input Pressure 1200 psi (8.3 MPa, 83 bar) Maximum Fluid Working Pressure

Model No. 244641, 3:1 Bulldog Ram 120 psi (0.8 MPa, 8.3 bar) Maximum Air Input Pressure 360 psi (2.5 MPa, 25 bar) Maximum Fluid Working Pressure

Model No. 244848, 3:1 Bulldog Sinker 120 psi (0.8 MPa, 8.3 bar) Maximum Air Input Pressure 360 psi (2.5 MPa, 25 bar) Maximum Fluid Working Pressure

Model No. 244905, 50:1 Fire–Ball® 425 Ram 80 psi (0.6 MPa, 5.5 bar) Maximum Air Input Pressure 4000 psi (27.6 MPa, 276 bar) Maximum Fluid Working Pressure

Model No. 244906, 75:1 Fire-Ball® 425 Ram

53 psi (0.4 MPa, 3.7 bar) Maximum Air Input Pressure 4000 psi (27.6 MPa, 276 bar) Maximum Fluid Working Pressure


Model No. 244642, 5:1 Dynastar 120 lb. Drum 1000 psi (6.9 MPa, 69 bar) Maximum Hydraulic Input Pressure 5000 psi (34.5 MPa, 345 bar) Maximum Fluid Working Pressure

Model No. 244643, 5:1 Dynastar 400 lb. Drum 1000 psi (6.9 MPa, 69 bar) Maximum Hydraulic Input Pressure 5000 psi (34.5 MPa, 345 bar) Maximum Fluid Working Pressure



Important Safety Instructions


Read all warnings and instructions in your pump and motor instruction manuals. Save those instructions.

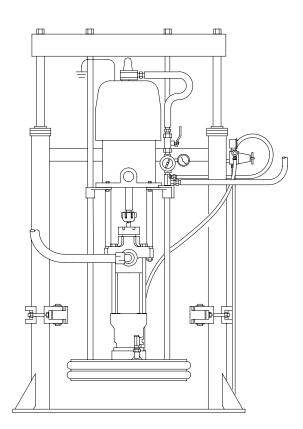



309345 rev.C

Installation

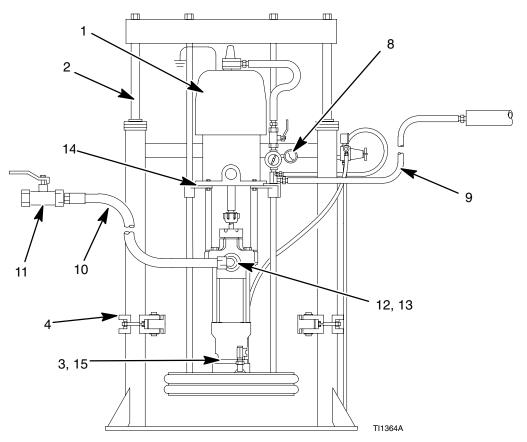

NOTE: See pump and motor manuals for important **safety warnings** and installation, operation, and service instructions.

NOTE: For the Dynastar pump, consult with your system installer and see your Dynastar manual 308156 (supplied) for important hydraulic installation instructions.

Model No. 244638, 65:1 King Ram (includes items 1–4, 8–12) Model No. 244639, 55:1 Bulldog Ram (includes items 1–4, 8–13)

Model No. 244640, 12:1 Bulldog Ram *(includes items 1–4, 8–13)*

Model No. 244641, 3:1 Bulldog Ram (includes items 1–2, 4, 8–12)

Model No. 244848, 3:1 Bulldog Sinker (includes items 1–2, 8–12)

Model No. 244905, 50:1 Fire–Ball® 425 Ram (includes items 1–3, 8–9, 14–15)

Model No. 244906, 75:1 Fire-Ball® 425 Ram (includes items 1-3, 8-9, 14-15)

Model No. 244642, 5:1 Dynastar 120 lb Drum (includes items 1, 5–7, 10–12)

Model No. 244643, 5:1 Dynastar 400 lb Drum (includes items 1, 5–7, 10–12)

Parts Lists

Ref.				Ref.			
No.	Part No.	Description	Qty.	No.	Part No.	Description G	Qty.
1	236471	PUMP, 65:1 King	1	8	244845	REGULATOR, air; 3/4" fbe	1
		(used on model 244638;				(used on model 244848;	
		see manuals 309347 and 308351))			see manual 308168)	
	222778	PUMP, 55:1 Bulldog	1		244844	REGULATOR, air; 1/2" fbe	1
		(used on model 244639;				(used on models 244905 and	
		see manuals 307049 and 308017)		•	000010	244906; see manual 308167)	
	222828	PUMP, 12:1 Bulldog	1	9	208610	HOSE, air; 3/4" ID; 3/4" npt(mbe)	1
		(used on model 244640;	`			x 6 ft (used on models 244638,	
	205148	see manuals 307049 and 308149) PUMP, 3:1 Bulldog	, 1			244639, 244640, 244641, and 244848)	
	203140	(used on models 244641 and	I		222076	KIT, hose and fitting (used on	1
		244848; see manuals 307049			LLLOIO	models 244905 and 244906; see	
		and 306642)				manual 307880)	
	205395	PUMP, 50:1 Fire–Ball® 425	1	10	244657	HOSE, fluid; 1" ID; 1" npt(mbe)	1
		(used on model 244905;				x 6 ft; 5000 psi (used on models	
		see manuals 306982 and 306674))			244638 and 244639)	
	239730	PUMP, 75:1 Fire–Ball® 425	1		115042	HOSE, fluid; 1" ID; 1" npt(mbe)	1
		(used on model 244906;				x 6 ft; 2400 psi (used on model	
		see manuals 306982 and 308777))			244640)	
	224751	PUMP, 5:1 Dynastar	1		244658	HOSE, fluid; 2" ID; 2" npt(mbe)	1
		(used on model 244642;				x 6 ft (used on models 244641 and	
	004750	see manual 308156)			215441	244848)	-
	224752	PUMP, 5:1 Dynastar	1		215441	HOSE, fluid; 1/2" ID; 1/2" npt(mbe) x 10 ft (used on models 244642 and	1
		(used on model 244643; see manual 308156)		24464	13)		J
2	207279	RAM (used on models 244638,	1	11	521477	VALVE, fluid shutoff; 1" npt(fbe);	1
-	20/2/0	244639, 244640, 244641, 244905			021111	5000 psi (used on models 244638	•
		and 244906; see manuals 306725				and 244639)	
		and 306934)			512152	VALVE, fluid shutoff; 1" npt(fbe);	1
	222404	INDUCTOR (used on model	1			2000 psi (used on model 244640)	
		244848)			512213	VALVE, fluid shutoff; 2" npt(fbe)	1
3	222776	KIT, mounting (used on models	1			(used on models 244641 and	
		244638, 244639, and 244640;				244848)	
	004000	see form 405952)			202869	VALVE, fluid shutoff; 1/2" npt(fbe)	1
	224266	KIT, adapter, inductor (used on	1			(used on models 244642 and	
4	006507	models 244905 and 244906)	4	12	116648	244643) ADAPTER, swivel, straight; 1"	-1
4	206537	CLAMP, drum (used on models 244638, 244639, 244640, and	1	12	110040	npt(m) x 1" npsm(f); 4200 psi (used	1
		244641)				on models 244638 and 244639)	
5	236864	MANIFOLD, hydraulic fluid control	1		160022	ADAPTER, swivel, straight; 1"	1
Ũ	200001	(used on models 244642 and				npt(m) x 1" npsm(f); 2000 psi (used	
		244643; see manual 308395)				on model 244640)	
6	204574	COVER, drum (used on model	1		116470	ADAPTER, swivel, straight; 2"	1
		244642; see manual 306345)				npt(m) x 2" npsm(f) (used on	
	200326	COVER, drum (used on model	1			models 244641 and 244848)	
		244643)			156684	ADAPTER, swivel, straight; 1/2"	1
7	223700	PLATE, follow (used on model	1			$npt(m) \ge 1/2^{\circ} npsm(f)$ (used on	
	000701	244642; see manual 306345)		10	110040	models 244642 and 244643)	4
	223701	PLATE, follow (used on model	1	13	116649	COUPLING; 1" npt(f) x 3/4" npt(f) (used on model 244639)	1
8	207651	244643; see manual 306345) KIT, regulator, air (used on model	1		116650	COUPLING; 1–1/2" npt(f) x 1"	1
0	201001	244638; see manual 308168)	I		110000	npt(f) (used on model 244640)	
	205712	KIT, regulator, air (used on model	1	14	247337	PLATE, mounting (used on	1
	_	244639, 244640, and 244641; see		-		models 244905 and 244906)	
		manual 308168)		15	247335	KIT, ram plate seal	1
		-				(used on models 244905 and 24490	06)

Graco Standard Warranty

Graco warrants all equipment manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

Graco makes no warranty, and disclaims all implied warranties of merchantability and fitness for a particular purpose in connection with accessories, equipment, materials or components sold but not manufactured by Graco. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés à la suite de ou en rapport, directement ou indirectement, avec les procedures concernées.

Graco Phone Numbers

TO PLACE AN ORDER, contact your Graco distributor, or call one of the following numbers

to identify the distributor closest to you: 1–800–533–9655 Toll Free 612–623–6928 612–378–3590 Fax

All written and visual data contained in this document reflect the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

This manual contains English. MM 309345

Graco Headquarters: Minneapolis International Offices: Belgium, Korea, China, Japan

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

www.graco.com

309345 05/2001, Revised 01/2007