
Instructions



Important Safety Instructions

Read all warnings and instructions in this manual and in the sprayer operation manual. Save these instructions.

Lacquer Conversion Kit 248202

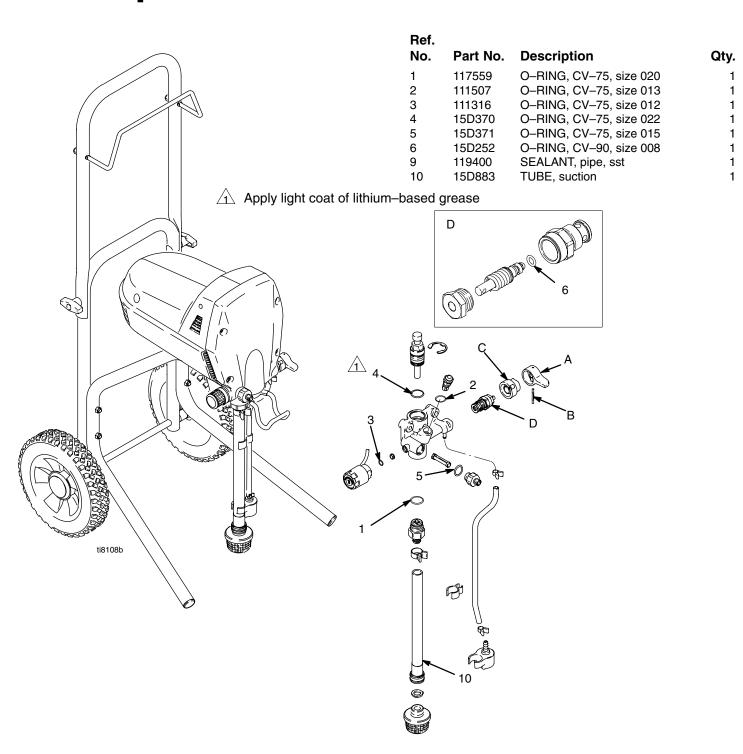

Instructions

- 1. To relieve pressure:
 - a. Turn power switch OFF.
 - b. Unplug sprayer.
 - c. Turn Spray-Prime/Drain knob (A) down.
 - d. Hold metal part of gun firmly to a grounded metal pail. Pull gun trigger to relieve pressure.
- 2. Fig. 1. Turn knob (A) up to Spray position.
- 3. Remove pin (B) with 3/32 pin punch and hammer.

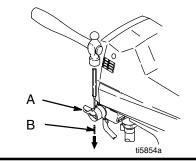


Fig. 1

4. Fig. 2. Remove knob (A) and base (C).

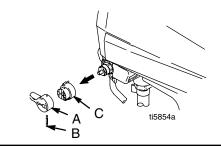


Fig. 2

Fig. 3. Remove valve stem (D) from manifold. Be sure gasket (8) and seat (7) do not stay in manifold.

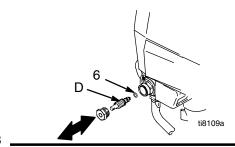


Fig. 3

6. Replace brown o-ring (6) on end of valve stem. Apply sealant (9) to valve threads. Install valve stem in pump manifold. Torque to 185 in-lb (21 N-m).

7. Fig. 4. Install base (C) on valve, aligning pin (E) on base (C) with hole (F) on manifold.

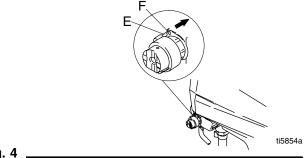


Fig. 4

Fig. 5. Rotate valve stem with a 3/32 pin punch until hole is perpendicular.

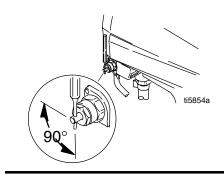


Fig. 5

- 9. Fig. 6. Install knob (A) over base (C).
- 10. Place knob in Spray position.
- 11. Insert end of pin punch through hole in knob (A), to make sure knob and valve stem are aligned.

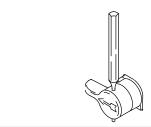


Fig. 6

12. Install pin (B) through hole in knob (A). Tap pin through knob with hammer. Correctly installed, end of pin is flush with top of hole in knob.

All written and visual data contained in this document reflect the latest product information available at the time of publication.

Graco reserves the right to make changes at any time without notice.

MM 310724

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

www.graco.com 3/2004, Rev 11/2006