

# 247308 Software Upgrade Kit

311901 rev.B

**For Pump Control on H-25 and H-XP2 Hydraulic Proportioners.**

 


## Important Safety Instructions

Read all warnings and instructions in Hydraulic Proportioner Operation Manual 311299. Save these instructions.


## Equipment Needed

**Board to be Upgraded**

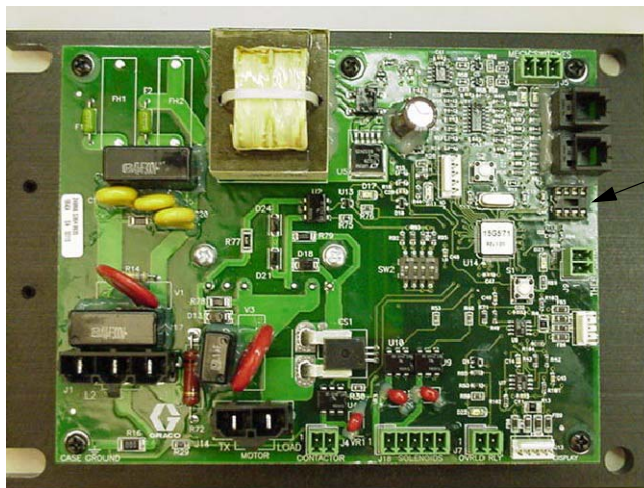

**8-pin DIP Socket**

 **EEPROM Software Upgrade Chip**

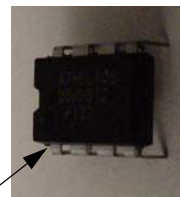


**Pin 1**

**IC Extractor Tool**


 
## Procedure



1. Attach the grounding strap included with the kit to your wrist and ground yourself appropriately.
2. Turn off the power to the H-25/H-XP2 unit.
3. Remove the lower front cover.
4. Locate 253221 Motor Board on right side of enclosure. Locate 8-pin DIP socket on right edge of board, about halfway down.

5. Insert EEPROM into 8-pin DIP socket with pin 1 (marked by notch on chip) to the left (toward back of enclosure).
6. Turn on the power to the H-25/H-XP2 unit. The red LED will flash while programming. When the red LED stops flashing (about 1 minute), turn off the power to the H-25/H-XP2 unit.
7. Remove EEPROM from socket, using the IC extractor tool provided.
8. Replace the front cover.
9. Turn on the power to the H-25/H-XP2 unit.

## Graco Information

**TO PLACE AN ORDER**, contact your Graco distributor or call to identify the nearest distributor.  
**Phone:** 612-623-6921 **or Toll Free:** 1-800-328-0211 **Fax:** 612-378-3505

*All written and visual data contained in this document reflects the latest product information available at the time of publication.  
Graco reserves the right to make changes at any time without notice.*

This manual contains English. MM 311901

**Graco Headquarters:** Minneapolis

**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441**

[www.graco.com](http://www.graco.com)

1/2007, Revised 5/2007