 


312354 rev.A

Replacing the EM5[™] Meter

R

These instructions are provided as a quick maintenance guide. They are not meant to replace the Instruction Manual. See Instruction Manual for Warnings and information on the safe and proper operation of this equipment. It is important that you read and understand all instructions and hazards before operating this equipment.



PRESSURIZED EQUIPMENT HAZARD This equipment stays pressurized until pressure is manually relieved. To reduce the risk of serious injury from pressurized fluid, accidental spray from dispense valve or splashing fluid, follow steps 2-3 on page 2.

Before you start

Be sure that you have the following items available:

- 9 in. crescent or open end wrench 7/8 in.
- 9 in. crescent or open end wrench 1¹/₈ in.
- Waste container
- Thread tape



PROVEN QUALITY. LEADING TECHNOLOGY.



1. Pull down enough hose so that the meter can be supported on the floor or other flat work surface.



2. Set air regulator pressure to zero psi and/or turn off main air supply.



3. Trigger the dispense valve into a waste fluid container to relieve fluid pressure.



4. Slide the swivel cover off the swivel.





6. Wrap hose thread with thread tape as shown above.





3

Replacing the EM5[™] Meter

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

This manual contains English. MM 312354

Graco Headquarters: Minneapolis International Offices: Belgium, China, Japan, Korea

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

www.graco.com 5/2007