

Air Valve Repair Kits

406961C

Husky® 2200 and 3300 Diaphragm Pumps

EN

Kit 24K860
Kit 24K954




Important Safety Instructions

Read all warnings and instructions in the Husky® 2200 or Husky® 3300 Air-Operated Diaphragm Pump Repair/Parts manual. Save all instructions.

Ref.	Description	Qty.	Ref.	Description	Qty.
202	PISTON	1	209	SCREW	2
203*	DETENT PISTON ASSEMBLY	1		Kit 24K860: M3 (shorter - for metal pumps) and #4 (longer - for plastic pumps)	
204*	CAM, detent	1		Kit 24K954: M3	
205	PLATE, air valve	1	211*	DETENT SPRING	1
206	O-RING	3	212	BASE, cup	1
208	U-CUP	2	213	CUP	1
* Not used in the air valve used for all 2200 models or with 3300 models with PTFE Overmolded diaphragms.			215	GREASE, lithium-based (not shown)	1

-  Apply lithium-based grease.
-  U-cup lips must face piston.
-  Apply lithium-based grease to contact surface.
-  Not used in the air valve used for models with PTFE Overmolded diaphragms.

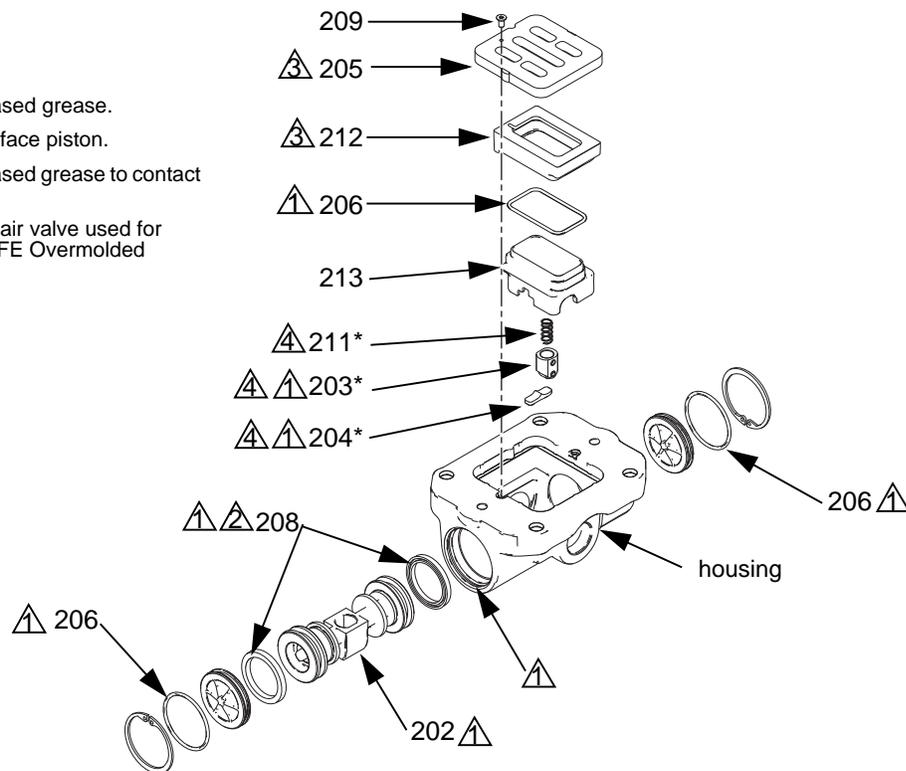

ti17765a