

Waste Lube Receiver

Model 225-272, Series A

Height: 49" (124.46 cm) – lowered

80" (203.2 cm) – raised

Width: 16" (40.64 cm)

Weight: 20 lb (9.07 kg)

Installation

Install the type of receiver drain system (remote or direct) desired. See ACCESSORIES at bottom of this page for available drain elbow and adapter.

NOTE: These parts have a flow actuator that opens the bowl throat valve when a full bowl is set on it, allowing bowl to drain.

Operation

Position the receiver under the crankcase to be drained.


Open the bowl cover (11), squeeze the ends of the torsion spring (2), slide the inner riser tube (3) up until the bowl (14) is at desired height and release spring ends. See parts drawing on the back page.

After the crankcase is drained, grasp the inner riser tube, squeeze the ends of the torsion spring and lower the bowl slowly to prevent splashing.

Accessories

Drain Elbow 154-616

For draining waste lube into remote tank

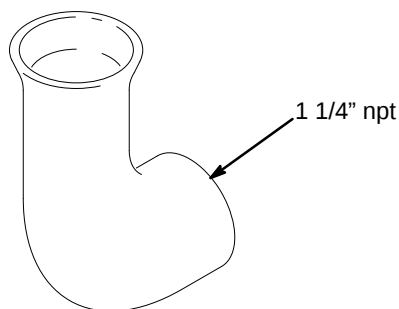

Lift the bowl from the inner riser tube and set on the drain elbow or adapter to drain.

NOTE: Waste lube should be disposed of in accordance with EPA regulations or ordinances.

Service

Throat Valve Cleaning

If the throat valve fails to open or close properly, clean as follows:


1. Dump the waste lube from bowl and remove the screw (5), washer (17) and spring (6) from the valve stem (16). See parts drawing.
2. Remove the valve stem (16), flange washer (15), gasket (7), valve disk (8) and screw (9) from the bowl throat.
3. Clean parts in nonflammable fluid or solvent and reassemble parts in the reverse order of removal.

Throat Valve Replacement


If the throat valve leaks, remove parts as instructed in Throat Valve Cleaning above and replace with new parts (repair kit 205-697 is available). Reassemble parts in the reverse order of removal.

Drain Adapter 156-789

For draining waste lube into empty drum

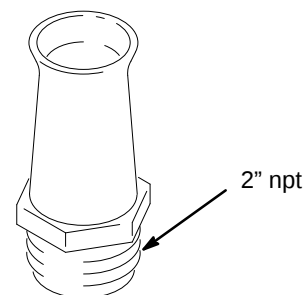

Parts Drawing

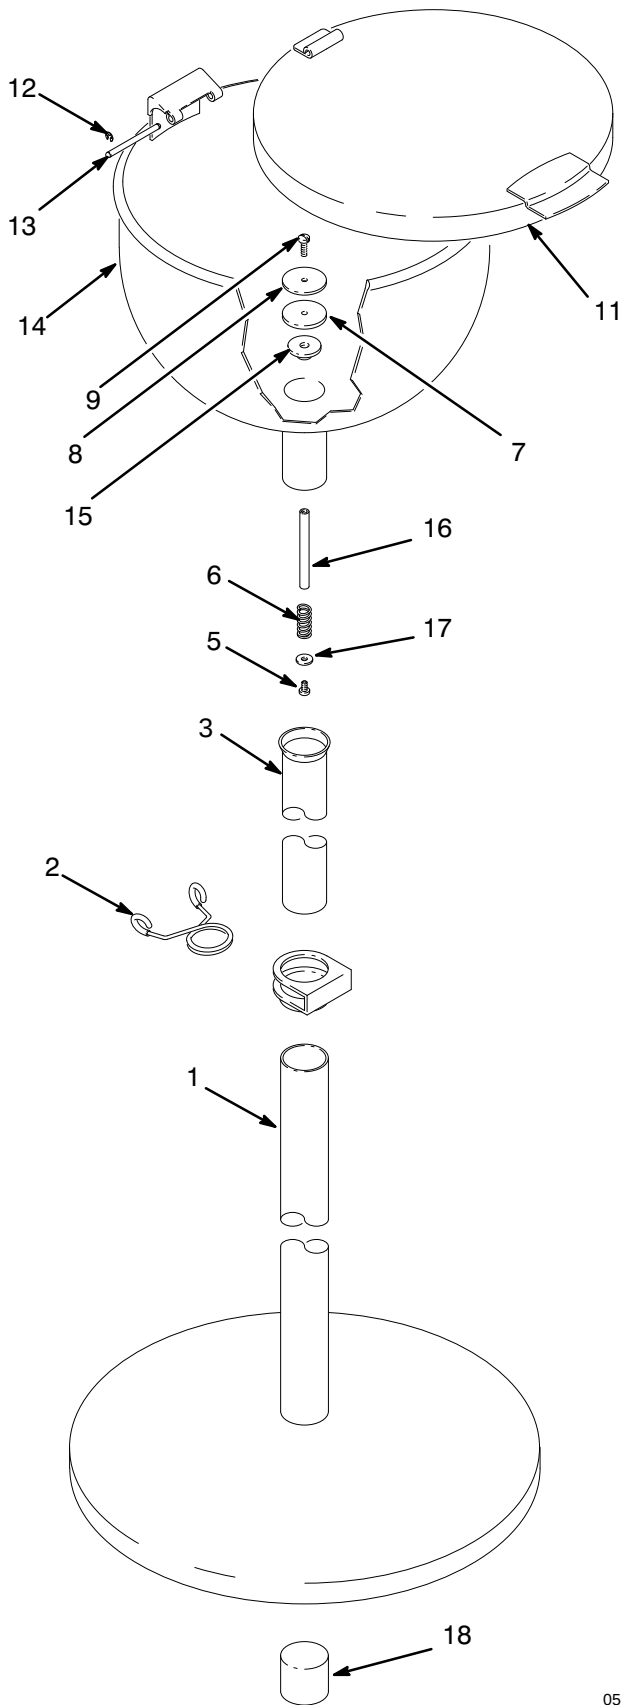

Parts List

Ref. No.	Part No.	Description	Qty.
1	201-122	BASE, receiver	1
2	104-820	SPRING, torsion; snubbing type	1
3	153-591	TUBE, inner riser	1
4	201-123	BOWL ASSEMBLY, includes items 5-17	1
5*	100-264	.SCREW, rd hd mach; 10-32 x 0.312"	1
6*	154-617	.SPRING, compression	1
7*	153-267	.GASKET, rubber	1
8*	150-739	.DISK, valve	1
9*	100-036	.SCREW, rd hd mach; 10-24 x 0.50"	1
11	202-459	.COVER, bowl	1
12	101-021	.RING, retaining	2
13	157-492	.PIN, hinge	1
14	202-157	.BOWL	1
15*	154-618	.WASHER, flange	1
16*	153-269	.STEM, valve	1
17*	153-271	.WASHER, flat	1
18	100-636	CORK, taper; no. 20	1

*Supplied in repair kit 205-697.

05926

[illegible]

The Graco Warranty and Disclaimers

WARRANTY

Graco warrants all equipment listed in this manual which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale by an authorized Graco distributor to the original purchaser for use. Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS, OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.) are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

For Sales to Canadian Customers:

Except as expressly stated herein, Graco makes no representations, warranties or conditions, express, implied or collateral, concerning any goods or services sold, and **GRACO SHALL NOT BE LIABLE IN ANY MANNER FOR** any other representation, warranty or condition of any kind, whether arising by operation of law or otherwise, including but not limited to, **WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

LIMITATION OF LIABILITY

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or for the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

SPECIAL WARRANTY FOR DURA-FLO™ DISPLACEMENT PUMP LOWERS

For no additional cost, Graco offers an extended warranty for Dura-Flo displacement pump lowers for 36 months from the date of sale by an authorized Graco distributor to the original purchaser for use. All other terms and conditions of the Graco warranty shall apply.

Graco Phone Numbers

TO PLACE AN ORDER, contact your Graco distributor, or call this number to identify the distributor closest to you:
1-800-367-4023 Toll Free

Sales Offices: Atlanta, Chicago, Detroit, Los Angeles
Foreign Offices: Belgium, Canada, England, Korea, Switzerland, France, Germany, Hong Kong, Japan

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

PRINTED IN U.S.A. 306-077 December 1954 Revised February 1996