

AIR MOTOR REPLACEMENT KIT 223099

307977 rev.C

*For replacing air motor 215963 on 1:1 ratio Fast-Flo® Pumps,
Models 226940, 226941, 226942, 226943, 226944, 226945,
226947, 226948, 226951, 226952 and 226953.*




Important Safety Instructions

Read all warnings and instructions in this manual.
Save these instructions.

See Fast-Flo Pump instruction manual 307427
for detailed repair instructions.

PROVEN QUALITY. LEADING TECHNOLOGY.



Installation

WARNING

Pressure Relief Procedure

To reduce the risk of serious bodily injury, including splashing fluid in the eyes or on the skin, or injury from moving parts, always follow this procedure whenever you shut off the pump, when checking or servicing any part of the system, when installing, cleaning or changing nozzles, and whenever you stop dispensing.

1. Shut off the air to the pump.
2. Close the bleed-type master air valve (required in your system).
3. Hold a metal part of the dispensing valve firmly to the side of a grounded metal pail, and trigger the valve to relieve pressure.
4. Open the drain valve (required in your system), having a container ready to catch the drainage.
5. Leave the drain valve open until you are ready to dispense again.

*If you suspect that the nozzle or hose is completely clogged, or that pressure has not been fully relieved after following the steps above, **very slowly** loosen the hose end coupling and relieve pressure gradually, then loosen completely. Now clear the nozzle or hose.*

Tools Needed

- 10 mm open end wrench
- 13 mm open end wrench
- small ball peen hammer
- needle-nose pliers
- small metal scribe
- 2.5 mm Allen wrenches

Before You Start

1. Follow the **Pressure Relief Procedure Warning** above.
2. Read the Pump Model No. and Series Letter from the designation plate on the air motor being replaced. Use a metal scribe to record this information on the designation plate (2) included in the kit. See Fig. 1.

3. Fasten the new designation plate (2) to the new air motor (1) with two drive screws (3).

Removing the Old Air Motor

1. Clamp the pump (A) in a bench vise. Be careful to prevent damaging the pump.
2. Use a 13 mm open end wrench to unscrew the three tie rod locknuts (4).
3. Use a 2.5 mm Allen wrench to remove the screw (5) from the threaded barrel (7). Then remove both parts from the connecting rod.

CAUTION

To prevent damaging the air motor connecting rod (C) or the pump displacement rod (D), do not use clamp-type wrenches on these parts.

4. Pull the air motor (1) away from the pump. Unscrew the air motor connecting rod (C) from the pump displacement rod (D). Remove the air motor.
5. Remove the o-ring (6) from the pump displacement rod (D) and discard.

Installing the New Air Motor

1. Use a 10 mm open end wrench to make sure the three tie rods (E) are screwed tightly into the pump housing.
2. Install the new o-ring (6) against the shoulder of the pump displacement rod (D).
3. Apply lithium base grease to the threads of the pump displacement rod (D).
4. Install the new air motor (1) onto the pump (A). Screw the air motor connecting rod (C) onto the pump displacement rod (D), hand tight.
5. Install the barrel pin (7) through the air motor connecting rod (C) and the pump displacement rod (D). Turn the connecting rod to align the holes if necessary.
6. Use the 2.5 mm Allen wrenches to hand tighten the screw and barrel set (5 and 7).
7. Turn the air motor (1) so the air inlet (F) is oriented as shown in Fig. 1. Set the air motor in place on the tie rods (E).
8. Apply thread sealant to the threads of the tie rods (E). Install three new locknuts (4) loosely onto the tie rods. Torque the locknuts evenly to 15 N.m (8 ft-lb).

Installation


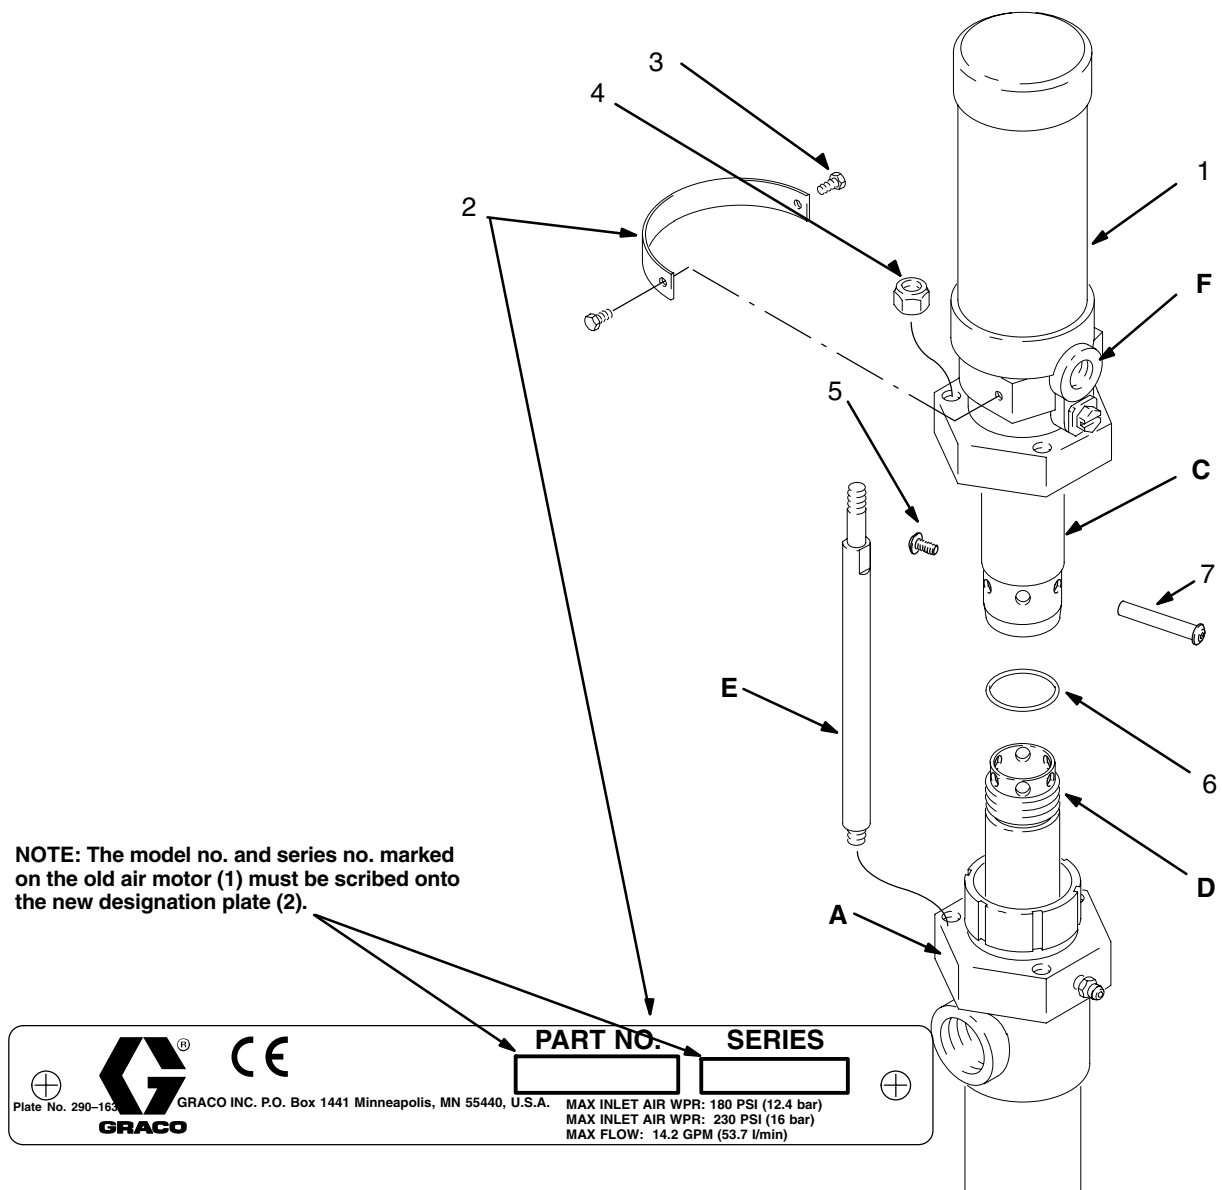


Fig. 1

Parts

Air Motor Replacement Kit 223099
Includes items 1–7

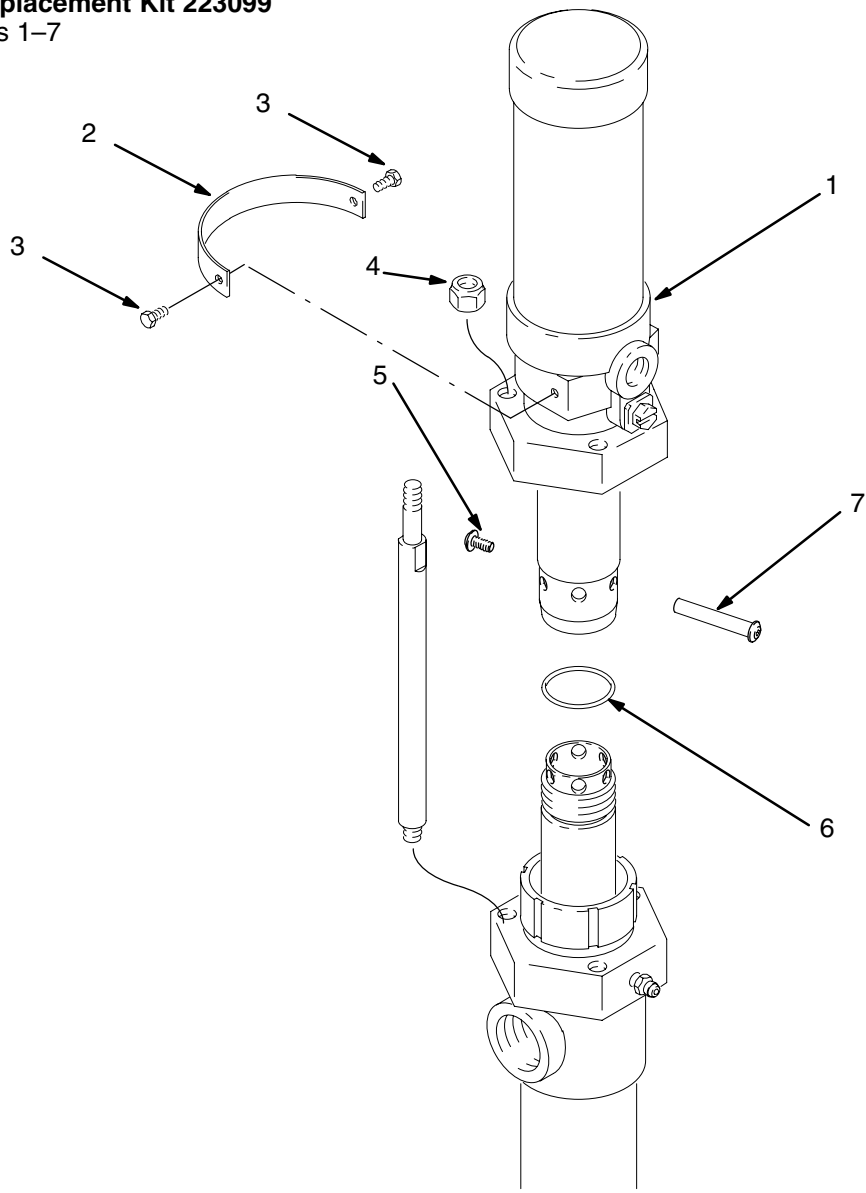

REF			
NO.	PART NO.	DESCRIPTION	QTY
1	215963	AIR MOTOR	
		See manual 307456 for parts	1
2	290163	PLATE, designation	1
3	100508	SCREW, drive	2
4	104541	NUT, lock; M8; w/nylon insert	3
5	15B250	SCREW	1
6	177156	O-RING; fluoroelastomer	1
7	15B249	PIN, barrel	1

[illegible]

Graco Standard Warranty

Graco warrants all equipment manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale by an authorized Graco distributor to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

Graco makes no warranty, and disclaims all implied warranties of merchantability and fitness for a particular purpose in connection with accessories, equipment, materials or components sold but not manufactured by Graco. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

TO PLACE AN ORDER, contact your Graco distributor, or call one of the following numbers to identify the distributor closest to you:

1-800-328-0211 Toll Free

612-623-6921

612-378-3505 Fax

*All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.*

MM 307977

Graco Headquarters: Minneapolis
International Offices: Belgium, China, Japan, Korea

www.graco.com

PRINTED IN USA 307977 6/1989, Revised 4/2006