



INSTRUCTIONS

READ AND RETAIN FOR REFERENCE

First choice when
quality counts.™

MONARK, PRESIDENT, AND VISCOUNT

Pump Mounting Bracket

For permanent space saving mounting of pumps and pump accessories

Kit 207365 and 206778

For mounting divorced, 3 tie rod or single riser tube
Monark®, President® and Viscount® I pumps.

Kit 206220


For mounting divorced, 2 tie rod Monark® pumps. Can
be adapted for divorced, 3 tie rod Monark® pumps with
adapter plate 206108.

Kit 206221

For mounting Bulldog® and Viscount® II pumps, and
President® High-Flo® pumps.

Kit 244688

For mounting divorced, 2 tie rod President® pumps.

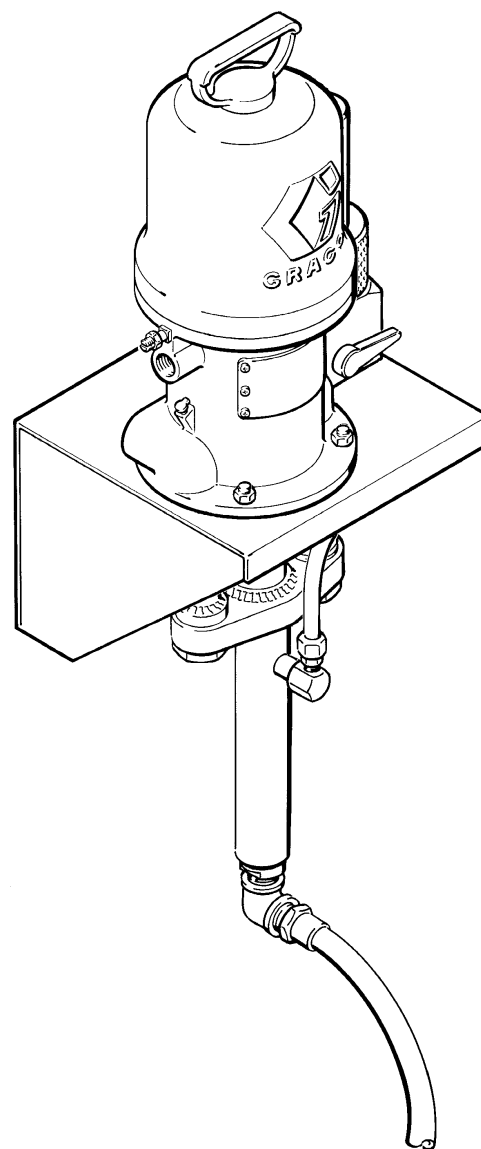

Installation

Select a solid position on a vertical surface for mounting bracket. Be sure the structure is capable of supporting the pump and accessories that will be attached to the bracket, any additional weight of fluid used in the pump, and also any stress or strain that may be applied to the bracket during pump operation.

NOTE: Approximate weights of pump and accessories are:

Bulldog® Pump: 150 lb (67 kg)

President® Pump: 60 lb (27 kg)

President® High-Flo® Pump: 66 lb (30 kg)

Monark® Pump: 50 lb (22 kg)

Drill four 7/16 inch diameter holes for the mounting bolts, approximately 5 ft (1.5 m) above the floor, according to the dimensions shown in the following parts illustrations.

NOTE: Bracket 206221 has two sets of four holes. The inner set of holes is for mounting the President High-Flo pump, and matches an existing hole pattern used for a President wall bracket.

Bolt the bracket securely to the structure. Use bolts designed to hold in the structure's construction.

Place the pump and accessories over the mounting studs or holes and secure with screws, washers and nuts supplied.

NOTE: An adapter plate 206108 (A) is required to mount a 23:1 Monark pump (B) on bracket 206220 (C). See Figure 1.


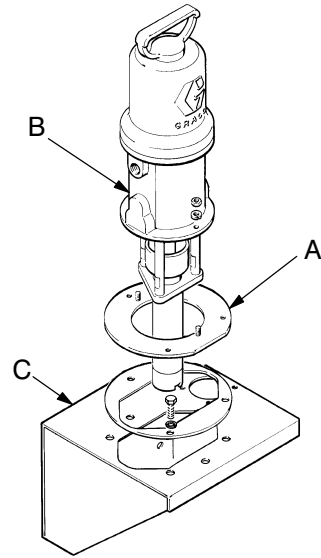


Fig. 1

Parts and Dimensions

207365 or 206778 Mounting Bracket

For mounting divorced, 3 tie rod or single riser tube Monark®, President® and Viscount® I pumps.

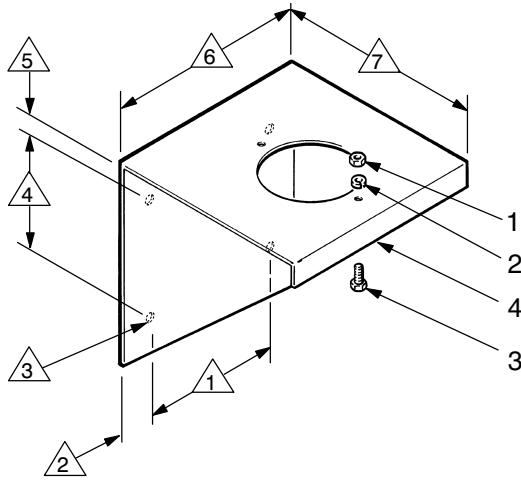


Ref. No.	Part No.	Description	Qty.
1	100015	NUT, hex; 1/2-20 unc	2
2	100016	WASHER, spring lock; 1/4"	2
3	100022	SCREW, cap, hex head; 1/4-20 unc x 3/4"	2
4	166397	BRACKET, bare; gray (used on Model 207365)	1
	206621	BRACKET, bare; yellow (used on Model 206778)	1

△1	6-1/4" (159 mm)	△5	2-1/8" (54 mm)
△2	1-1/2" (38 mm)	△6	9-1/4" (235 mm)
△3	7/16" dia. holes	△7	9" (229 mm)
△4	5-3/8" (137 mm)		

206220 Mounting Bracket

For mounting divorced, 2 tie rod Monark® and President® pumps. Can be adapted for divorced, 3 tie rod Monark® pumps with adapter plate 206108.

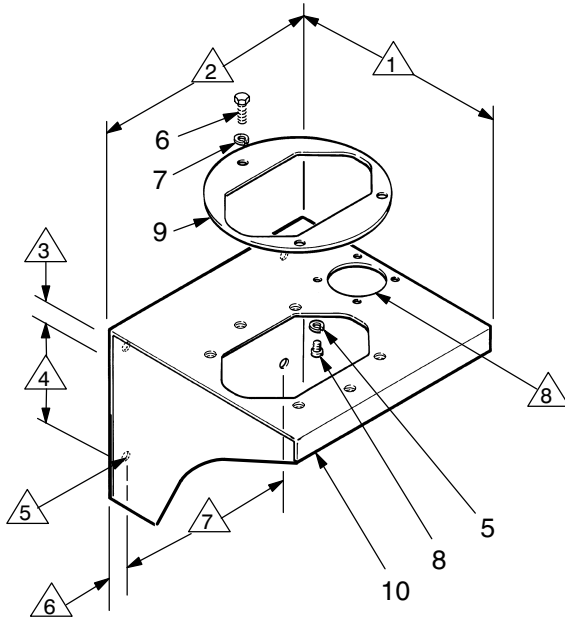


Ref. No.	Part No.	Description	Qty.
5	100016	WASHER, spring lock; 1/4"	4
6	100450	SCREW, cap, hex head; 5/16-18 unc x 1"	3
7	100214	WASHER, spring lock; 5/16"	3
8	100609	SCREW, machine, round head; 1/4-20 unc x 3/8"	4
9	161322	GASKET, pump; cork fiber	1
10	206293	BRACKET, bare	1

△1	10-1/2" (267mm)	△6	1" (25 mm)
△2	11" (279 mm)	△7	9" (228 mm)
△3	1-1/8" (29 mm)	△8	Outlet Manifold Mounting Hole
△4	5-3/8" (137 mm)		
△5	7/16" dia. Holes		

Parts and Dimensions

206221 Mounting Bracket

For mounting Bulldog®, Viscount® II, and President® High-Flo® pumps.

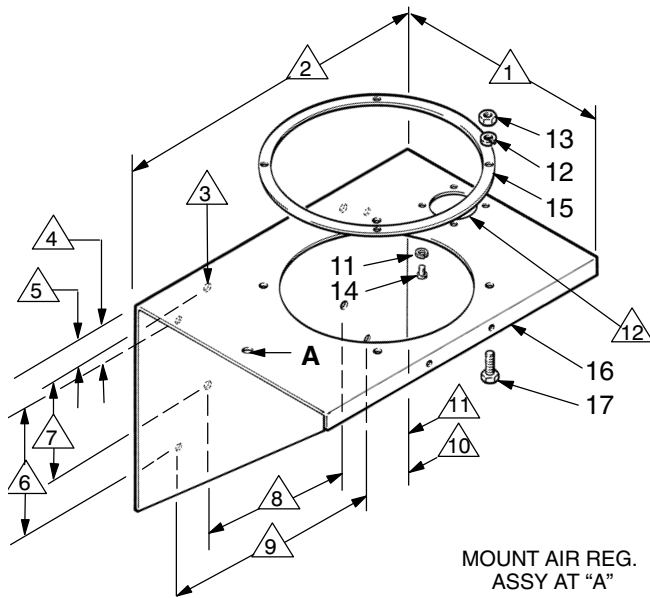


Ref. No.	Part No.	Description	Qty.
11	100016	WASHER, spring lock; 1/4 "	2
12	100133	WASHER, spring lock; 3/8"	4
13	100131	NUT, hex; 3/8-16 unc	4
14	100609	SCREW, machine, round head; 1/4-20 unc x 3/8"	2
15	161806	GASKET, pump; cork fiber	1
16	206294	BRACKET, bare	1
17	100101	SCREW, cap, hex head; 3/8-16 unc x 1"	4

1	12-1/2" (318 mm)	7	5-3/8" (137 mm)
2	18" (457 mm)	8	9" (228 mm)
3	7/16" dia. Holes	9	12-3/8" (314 mm)
4	2" (51 mm)	10	2-13/16" (72 mm)
5	1-1/8" (29 mm)	11	4.4" (112 mm)
6	7-3/8" (187 mm)	12	Outlet Manifold Mounting Hole

244688 Mounting Bracket

For mounting President® pumps.

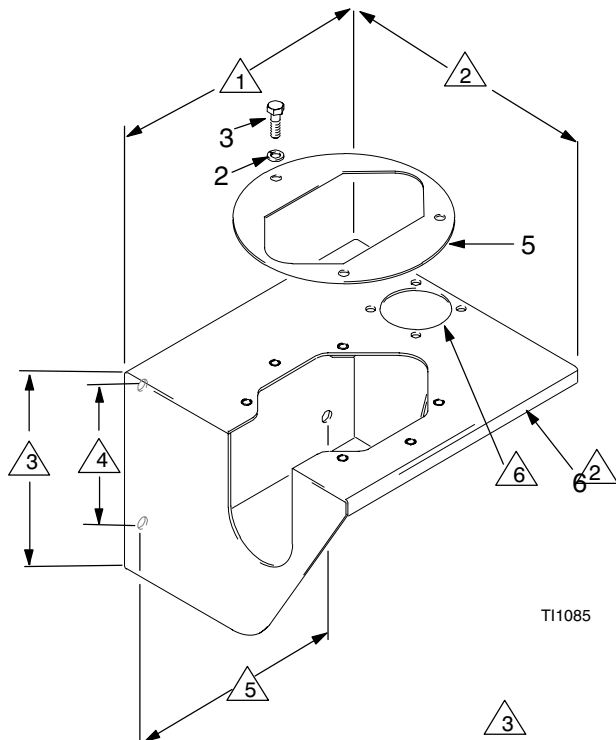

Ref. No.	Part No.	Description	Qty.
1	100016	WASHER, spring lock; 1/4 "	4
2	100214	WASHER, spring lock; 5/16"	3
3	100450	SCREW, cap, hex head; 5/16-18 unc x 1"	3
4	100609	SCREW, machine, round head; 1/4-20 unc x 3/8"	4
5	161322	GASKET, pump; cork fiber	1
6	244687	BRACKET, bare	1

1	11 " (279 mm)	7	5-3/8" (137 mm)
2	10.5" (267 mm)	8	9" (228 mm)
3	8" (203 mm)	9	12-3/8" (314 mm)
4	5.38" (137 mm)	10	2-13/16" (72 mm)
5	8" (203 mm)	11	4.4" (112 mm)
6	Outlet Manifold Mounting Hole	12	Outlet Manifold Mounting Hole

Notes

[illegible]

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale by an authorized Graco distributor to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Phone Numbers

TO PLACE AN ORDER, contact your Graco distributor, or call one of the following numbers to identify the distributor closest to you:

1-800-367-4023 Toll Free
612-623-6921
612-378-3505 Fax

Sales Offices: Minneapolis, Detroit
International Offices: Belgium, Korea, Hong Kong, Japan

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

PRINTED IN U.S.A. 306783 June 1964, Revised March 2001