



INSTRUCTIONS

This manual contains important warnings and information.
READ AND RETAIN FOR REFERENCE
See manual 308-393 for complete gun washer warnings and instructions.

CONVENTIONAL, NON-ELECTROSTATIC Gun Washer Kit

Part No. 236-905

For use with Graco Gun Washer to clean conventional, non-electrostatic spray guns. The kit enables you to clean exterior gun surfaces and internal fluid passages without getting solvent into the air passages.

WARNING

Observe all warnings. Read and understand all instruction manuals before operating equipment.

To reduce the risk of serious injury, including splashing fluid or solvent in the eyes or on the skin, shut off the air to the pump, relieve all system pressure, and drain the solvent from the gun washer tank before installing the kit.

Install Gun Support, Trigger Lock, and Fluid Inlet Adapter

1. Relieve the gun washer system pressure.
2. Determine which gun support is needed, using the **Gun Support Selection and Usage Chart** on page 2.
3. Remove a gun support (A) or spray nozzle (B) from one of the four cleaning stations. See Fig. 1.

NOTE: To ease removal of the spray nozzle, remove the metal platform from the gun washer tank.

4. Screw the gun support (1 or 2) supplied with the kit into the 1/8" npt hole. See Fig. 2.
5. If the gun support (1 or 2) replaced a spray nozzle (B—See Fig. 1), install the trigger lock (5) and fluid inlet adapter (3) to use with the fourth gun station. See Fig. 2. Place the wire loops on the snap ring (4) and snap it around an open spray nozzle.

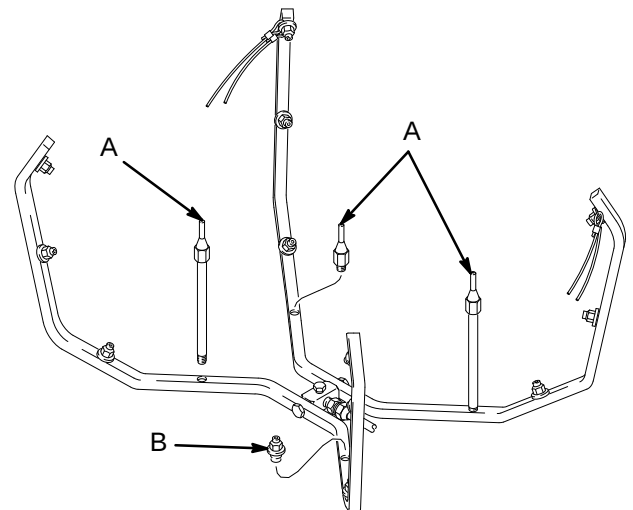


Fig. 1

03669

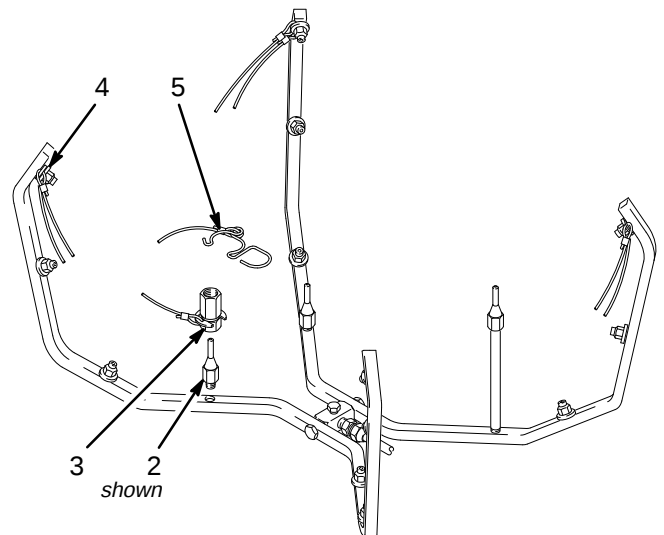


Fig. 2

03679

Clean the Gun

WARNING

To reduce the risk of serious injury, including fluid injection, splashing in the eyes or on the skin or electrostatic shock, always follow the Pressure Relief Procedure in your gun manual before removing the gun for cleaning.

- 1. Relieve the gun pressure, then remove the gun from the air and fluid supply lines.
- 2. Install the gun in the gun washer as instructed in the chart below. Refer to Fig. 3.

Gun Support Selection and Usage Chart

Type of Gun	Support to Use	How to Use
Siphon Feed	Short	Set gun siphon stem over support
Pressure Feed	Long	Set gun fluid inlet over support
Pressure Feed with Cup	Short	Set cup cover siphon stem over support
Gravity Feed	Long	Set gun fluid inlet over support
Other	Long or Short	Use the fluid inlet adapter and long or short gun supports as needed

NOTE: A kit, part no. 236–659 or 236–681, is required to clean Graco electrostatic PRO™ guns. See the gun washer manual 308–393 for the kit descriptions.

WARNING

To reduce the risk of fire or explosion; which could result in serious injury and property damage, be sure to follow these precautions.

- Never place the gun air inlet over a gun support.
- Only use the fluid inlet adapter provided with the gun washer.
- Follow the spray gun manufacturer’s cleaning recommendations and the solvent material safety data sheets when selecting a solvent.
- Always use solvent with the highest possible flashpoint.

- 3. Operate the gun washer as instructed in the gun washer manual.
- 4. Remove the gun from the gun washer and blow or wipe any solvent remaining on the gun exterior.


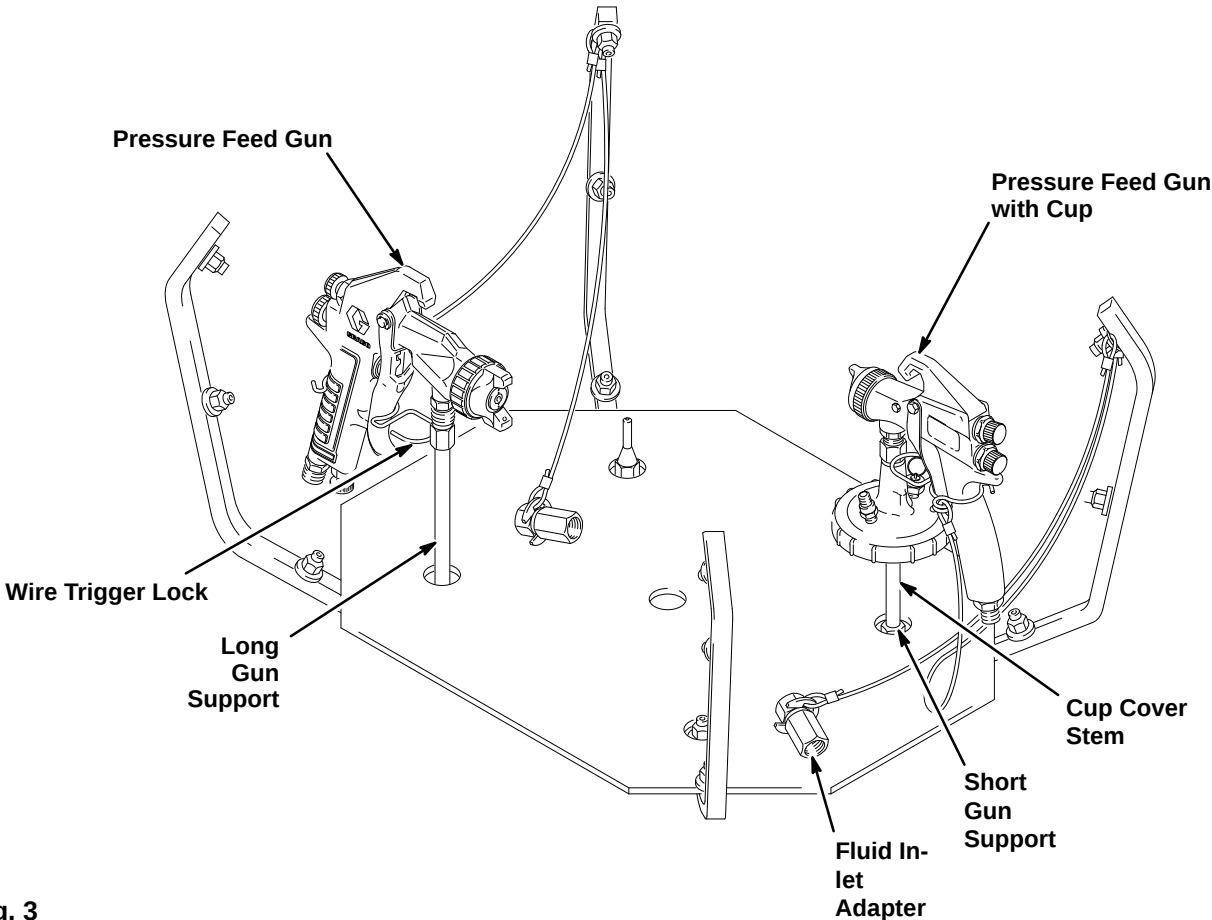


Fig. 3

Parts Drawing

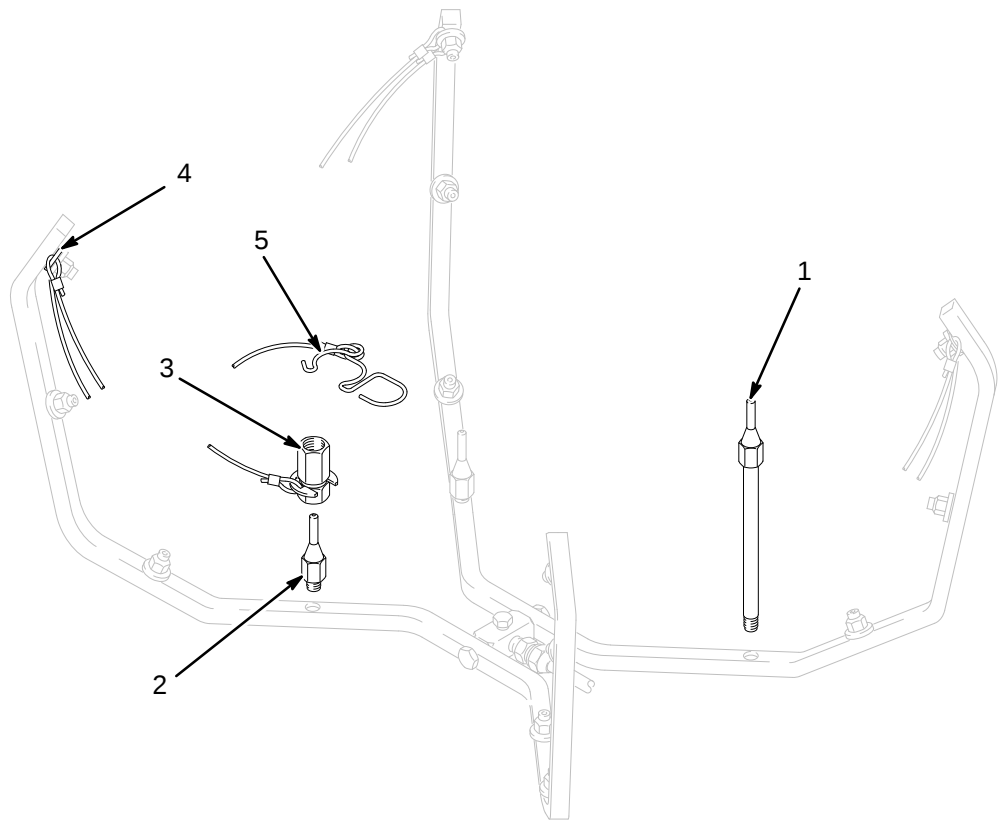

03687

Parts List

Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
1	512-800	GUN SUPPORT, long	1	4	112-851	SNAP RING	1
2	112-847	GUN SUPPORT, short	1	5	512-802	TRIGGER LOCK, wire; stainless steel; Includes cable & 2 clamps	1
3	512-835	ADAPTER, fluid inlet; brass; Includes cable & 1 snap ring	1				

The Graco Warranty and Disclaimers

WARRANTY

Graco warrants all equipment manufactured by it and bearing its name to be free from defects in material and workmanship on the date of sale by an authorized Graco distributor to the original purchaser for use. As purchaser's sole remedy for breach of this warranty, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment proven defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for, any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility with Graco equipment of structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claim. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor and transportation.

DISCLAIMERS AND LIMITATIONS

The terms of this warranty constitute purchaser's sole and exclusive remedy and are in lieu of any other warranties (express or implied), **including warranty of merchantability or warranty of fitness for a particular purpose**, and of any non-contractual liabilities, including product liabilities, based on negligence or strict liability. Every form of liability for direct, special or consequential damages or loss is expressly excluded and denied. In no case shall Graco's liability exceed the amount of the purchase price. Any action for breach of warranty must be brought within two (2) years of the date of sale.

EQUIPMENT NOT COVERED BY GRACO WARRANTY

Graco makes no warranty, and disclaims all implied **warranties of merchantability and fitness for a particular purpose**, with respect to accessories, equipment, materials, or components sold but not manufactured by Graco. These items sold, but not manufactured by Graco (such as electric motor, switches, hose, etc.) are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

Graco Phone Numbers

FOR TECHNICAL ASSISTANCE, service repair information or assistance regarding the application of Graco equipment: **1-800-543-0339 Toll Free**

TO PLACE AN ORDER, contact your Graco distributor, or call this number to identify the distributor closest to you: **1-800-367-4023 Toll Free**

Sales Offices: Atlanta, Chicago, Dallas, Detroit, Los Angeles, Mt. Arlington (N.J.)
Foreign Offices: Canada; England; Korea; Switzerland; France; Germany; Hong Kong; Japan

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

PRINTED IN U.S.A. 308-413 7/94