

Heated Hose In-Rush Current Limiter

311838 rev.A

Retrofit kit for Reactor 380 Vac 3 phase electric proportioners.

Model 288359



Important Safety Instructions Read all warnings and instructions in your Reactor manual. Save those instructions.

Installation

- 1. Shut down the Reactor unit and relieve all pressure from the system.
- 2. Disconnect the Reactor unit from the power supply.
- 3. Locate the heated hose transformer connector circled in FIG. 1 and unplug.

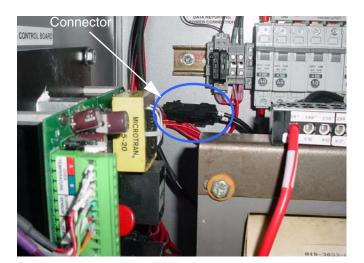


FIG. 1

PROVEN QUALITY. LEADING TECHNOLOGY.

4. Remove bolts that hold the transformer to the bottom of the unit. See FIG. 2.

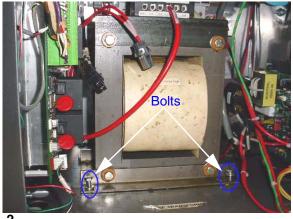


FIG. 2

- 5. Place in-rush assembly into case, placing transformer bolts through the rear holes on the in-rush bracket. Tighten bolts. See FIG. 3.
- 6. Connect plugs from in-rush limiter to mating plugs disconnected in step 3. See FIG. 3.
- 7. Route wires over transformer. See FIG. 3.

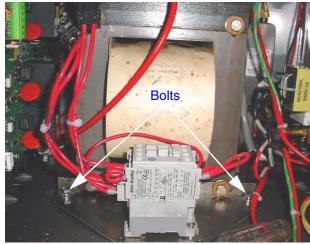


FIG. 3

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice. This manual contains English. MM 311838

Graco Headquarters: Minneapolis International Offices: Belgium, China, Japan, Korea

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

www.graco.com 12/2006